
Cello Digital Servo Drive Installation Guide



Notice

This guide is delivered subject to the following conditions and restrictions:

- This guide contains proprietary information belonging to Elmo Motion Control Ltd. Such information is supplied solely for the purpose of assisting users of the Cello servo drive in its installation.
- The text and graphics included in this manual are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- Elmo Motion Control and the Elmo Motion Control logo are trademarks of Elmo Motion Control Ltd.
- Information in this document is subject to change without notice.

Document No. MAN-CELIG
 Copyright ©2004
 Elmo Motion Control Ltd.
 All rights reserved.

Cello Catalog Number:	<p style="text-align: center;">CEL-<u>AXX</u>/<u>YYR</u></p> <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>Version:</p> <p>Blank = Standard A = Advanced</p> <p>Continuous Current (Amps)</p> <p>Maximum DC Operating Voltage</p> </div> <div style="width: 45%;"> <p>Feedback:</p> <p>Blank = Incremental Encoder and/or Halls R = Resolver I = Interpolated Analog Encoder</p> </div> </div>
Cable Kit Catalog No.	CEL-CABLEKIT (kit available upon request)

Revision History:

Ver. 1.03	June 2004	(MAN-CELIG.PDF)	Cello Cable Kit mentioned
Ver. 1.02	May 2004	(CELIG0504.PDF)	dimensions drawing updated
Ver. 1.0	April 2004	Initial Release	(CELIG0404.PDF)

Elmo Motion Control Inc.
 1 Park Drive, Suite 12
 Westford, MA 01886
 USA
 Tel: +1 (978) 399-0034
 Fax: +1 (978) 399-0035

Elmo Motion Control GmbH
 Steinbeisstrasse 41
 D-78056, Villingen-Schwenningen
 Germany
 Tel: +49 (07720) 8577-60
 Fax: +49 (07720) 8577-70





Contents

Chapter 1: Safety Information	1-1
1.1 Warnings	1-2
1.2 Cautions.....	1-2
1.3 Directives and Standards.....	1-3
1.4 CE Mark Conformance.....	1-3
1.5 Warranty Information.....	1-3
Chapter 2: Introduction	2-1
2.1 Drive Description	2-1
2.2 Product Features.....	2-1
2.2.1 Current Control.....	2-1
2.2.2 Velocity Control.....	2-1
2.2.3 Position Control	2-2
2.2.4 Advanced Position Control (<i>in Advanced model only</i>).....	2-2
2.2.5 Communication Options	2-2
2.2.6 Feedback Options	2-2
2.2.7 Fault Protection.....	2-3
2.3 System Architecture	2-3
2.4 How to Use this Guide.....	2-3
Chapter 3: Installation	3-1
3.1 Before You Begin	3-1
3.1.1 Site Requirements	3-1
3.1.2 Hardware Requirements	3-1
3.2 Unpacking the Drive Components	3-3
3.3 Mounting the Cello.....	3-4
3.4 Connecting the Cables.....	3-4
3.4.1 Wiring the Cello.....	3-4
3.4.2 Connecting the Power Cables.....	3-8
3.4.2.1 Connecting the Motor Cable.....	3-8
3.4.2.2 Connecting the Main Power Cable.....	3-9
3.4.3 Connecting the Optional Back-up Supply Cable (24v).....	3-10
3.4.4 Feedback and Control Cable Assemblies	3-11
3.4.5 Main Feedback Cable (FEEDBACK A)	3-11
3.4.6 Main and Auxiliary Feedback Combinations.....	3-14
3.4.7 Auxiliary Feedback (FEEDBACK B)	3-15
3.4.7.1 Buffered Main Encoder or Emulated Encoder Outputs.....	3-15
3.4.7.2 Differential Auxiliary Encoder Input Option.....	3-17
3.4.7.3 Single-ended Auxiliary Input Option	3-19
3.4.7.4 Pulse-and-Direction Input Option	3-21
3.4.8 I/O Cables	3-23
3.4.8.1 General I/O Port (J1)	3-23
3.4.8.2 General Input Port (J2)	3-25
3.4.9 Communication Cables.....	3-27
3.4.9.1 RS-232 Communication.....	3-27
3.4.9.2 CANopen Communication	3-28
3.5 Powering Up	3-30
3.6 Initializing the System.....	3-30

Appendix: Technical Specifications	A-1
A.1 Features.....	A-1
A.1.1 Motion Control Modes	A-1
A.1.2 Advanced Positioning Motion Control Modes	A-1
A.1.3 Advanced Filters and Gain Scheduling.....	A-1
A.1.4 Fully Programmable	A-1
A.1.5 Feedback Options	A-1
A.1.6 Input/Output.....	A-2
A.1.7 Built-In Protection	A-2
A.2 Cello Dimensions.....	A-3
A.3 Power Ratings	A-4
A.4 Environmental Conditions	A-4
A.5 Cello Connections.....	A-5
A.5.1 Backup Supply (Optional).....	A-6
A.6 Control Specifications	A-6
A.6.1 Current Loop.....	A-6
A.6.2 Velocity Loop.....	A-7
A.6.3 Position Loop	A-7
A.7 Feedbacks	A-8
A.7.1 Feedback Supply Voltage.....	A-8
A.7.2 Incremental Encoder Input	A-8
A.7.3 Digital Halls	A-9
A.7.4 Interpolated Analog Encoder (Sine/Cosine).....	A-9
A.7.5 Resolver	A-10
A.7.6 Encoder Outputs.....	A-10
A.8 I/O's	A-11
A.8.1 Digital Input Interfaces.....	A-11
A.8.2 Digital Output Interface	A-12
A.8.3 Analog Input.....	A-12
A.9 Communications.....	A-13
A.10 Pulse Width Modulation (PWM)	A-13
A.11 Mechanical Specifications.....	A-13
A.12 Standards Compliance	A-14
A.12.1 Quality Assurance.....	A-14
A.12.2 Design	A-14
A.12.3 Safety	A-14
A.12.4 EMC.....	A-14
A.12.5 Workmanship	A-15
A.12.6 PCB.....	A-15
A.12.7 Packing.....	A-15
Index	I-1

Chapter 1: Safety Information

In order to achieve the optimum, safe operation of the Cello servo drive, it is imperative that you implement the safety procedures included in this installation guide. This information is provided to protect you and to keep your work area safe when operating the Cello and accompanying equipment.

Please read this chapter carefully before you begin the installation process.




Before you start, ensure that all system components are connected to earth ground. Electrical safety is provided through a low-resistance earth connection.

Only qualified personnel may install, adjust, maintain and repair the servo drive. A “qualified person” has the knowledge and authorization to perform tasks such as transporting, assembling, installing, commissioning and operating motors.




The Cello servo drive contains electrostatic-sensitive components that can be damaged if handled incorrectly. To prevent any electrostatic damage, avoid contact with highly insulating materials, such as plastic film and synthetic fabrics. Place the product on a conductive surface and ground yourself in order to discharge any possible static electricity build-up.

To avoid any potential hazards that may cause severe personal injury or damage to the product during operation, keep all covers and cabinet doors shut.





The following safety symbols are used in this manual:

	<p>Warning: This information is needed to avoid a safety hazard, which might cause bodily injury.</p>
	<p>Caution: This information is necessary for preventing damage to the product or to other equipment.</p>
	<p>Note: This is auxiliary information that ensures the correct operation of the equipment.</p>

1.1 Warnings

	To avoid electric arcing and hazards to personnel and electrical contacts, never connect/disconnect the servo drive while the power source is on.
	Power cables can carry a high voltage, even when the motor is not in motion. Disconnect the Cello from all voltage sources before it is opened for servicing.
	After shutting off the power and removing the power source from your equipment, wait at least 1 minute before touching or disconnecting parts of the equipment that are normally loaded with electrical charges (such as capacitors or contacts). Measuring the electrical contact points with a meter, before touching the equipment, is recommended.

1.2 Cautions

	The Cello servo drive contains hot surfaces and electrically-charged components during operation.
	The maximum DC power supply connected to the instrument must comply with the parameters outlined in this guide.
	<p>The Cello can operate only through an isolated power source, using an isolated transformer and a rectifier circuit. Power to this device must be supplied by DC voltage, within the boundaries specified for the Cello. High voltages may damage the drive.</p> <p>The DC power supply voltage range is defined in Table A.3.</p> <p>Safety margins must be considered in order to avoid activating the under- or over-voltage protection against line variations and/or voltage drop under load. The transformer should be able to deliver the required power to the drive (including peak power) without significant voltage drops (10% maximum). While driving high-inertia loads, the power supply circuit must be equipped with a shunt regulator; otherwise, the drive will be disabled whenever the capacitors are charged above the maximum voltage.</p>
	Before switching on the Cello, verify that all safety precautions have been observed and that the installation procedures in this manual have been followed.

1.3 Directives and Standards

The Cello conforms to the following industry safety standards:

Safety Standard	Item
In compliance with UL508c In compliance with UL840	Conformance to the following safety standards: <ul style="list-style-type: none"> ▪ Power Conversion Equipment ▪ Insulation Coordination, Including Clearance and Creepage Distances of Electrical Equipment
In compliance with UL60950 (formerly UL1950)	Safety of Information Technology Equipment, Including Electrical Business Equipment
In compliance with EN60204-1	Low Voltage Directive, 73/23/EEC

The Cello servo drive has been developed, produced, tested and documented in accordance with the relevant standards. Elmo Motion Control is not responsible for any deviation from the configuration and installation described in this documentation. Furthermore, Elmo is not responsible for the performance of new measurements or ensuring that regulatory requirements are met.

1.4 CE Mark Conformance

The Cello servo drive is intended for incorporation in a machine or end product. The actual end product must comply with all safety aspects of the relevant requirements of the European Safety of Machinery Directive 98/37/EC as amended, and with those of the most recent versions of standards EN60204-1 and EN292-2 at the least.

According to Annex III of Article 13 of Council Directive 93/68/EEC, amending Council Directive 73/23/EEC concerning electrical equipment designed for use within certain voltage limits, the Cello meets the provisions outlined in Council Directive 73/23/EEC. The party responsible for ensuring that the equipment meet the limits required by EMC regulations is the manufacturer of the end product.

1.5 Warranty Information

The products covered in this manual are warranted to be free of defects in material and workmanship and conform to the specifications stated either within this document or in the product catalog description. All Elmo drives are warranted for a period of 12 months from the time of installation, or 18 months from time of shipment, whichever comes first. No other warranties, expressed or implied – and including a warranty of merchantability and fitness for a particular purpose – extend beyond this warranty.

Chapter 2: Introduction

This installation guide describes the Cello servo drive and the steps for its wiring, installation and powering up. Following these guidelines ensures maximum functionality of the drive and the system to which it is connected.

2.1 Drive Description

The Cello is a powerful servo drive that operates in digital current, velocity, position and advanced position modes, in conjunction with a permanent-magnet synchronous brushless motor or DC brush motor. The Cello features flexible sinusoidal and trapezoidal commutation, with vector control. The Cello can operate as a stand-alone device or as part of a multi-axis network in a distributed configuration.

The Cello drive is set up and tuned using Elmo's Composer software. This Windows-based application enables users to quickly and simply configure the servo drive for optimal use with their motor.

Power to the Cello is provided by a 10 to 195 VDC source. A "smart" control-supply algorithm enables the Cello to operate with the power supply only, *with no need for an auxiliary 24 Volt supply*. If backup functionality is required for storing control parameters in case of power-outs, an external 24 VDC power supply can be connected, providing maximum flexibility and optional backup functionality when needed.

Two variations of the Cello are available: the *Standard* version and the *Advanced* version, which features advanced positioning capabilities. Both versions operate with RS-232 and/or CANopen communication.

2.2 Product Features

2.2.1 Current Control

- Fully digital
- Sinusoidal commutation with vector control or trapezoidal commutation with encoder and/or digital Hall sensors
- 12-bit current loop resolution
- Automatic gain scheduling, to compensate for variations in the DC bus power supply

2.2.2 Velocity Control

- Fully digital
- Programmable PI and FFW (feed forward) control filters
- Sample rate two times current loop sample time
- "On-the-fly" gain scheduling
- Automatic, manual and advanced manual tuning and determination of optimal gain and phase margins

2.2.3 Position Control

- Programmable PIP control filter
- Programmable notch and low-pass filters
- Position follower mode for monitoring the motion of the slave axis relative to a master axis, via an auxiliary encoder input
- Pulse-and-direction inputs
- Sample rate four times current loop sample time
- Fast event capturing inputs

2.2.4 Advanced Position Control (*in Advanced model only*)

- Position-based and time-based ECAM mode that supports a non-linear follower mode, in which the motor tracks the master motion using an ECAM table stored in flash memory
- PT and PVT motion modes
- Dual (position/velocity) loop
- Fast output compare (OC)

2.2.5 Communication Options

Depending on the application, Cello users can select from two communication options:

- RS-232 serial communication
- CANopen for fast communication in a multi-axis distributed environment

2.2.6 Feedback Options

- Incremental Encoder - up to 20 Mega-Counts (5 Mega-Pulse) per second
- Digital Halls - up to 2 KHz
- Incremental Encoder with Digital Halls for commutation - up to 20 Mega-Counts per second for encoder
- Absolute Encoder
- Interpolated Analog Sine/Cosine Encoder - up to 250 KHz (analog signal)
 - Internal Interpolation - programmable up to x4096
 - Automatic Correction of:
 - ◆ amplitude mismatch
 - ◆ phase mismatch
 - ◆ signals offset
 - Encoder outputs, buffered, differential.
- Resolver
 - Programmable 10~15 bit resolution
 - Up to 512 Revolution Per Second (RPS)
 - Encoder outputs, buffered, differential
- Elmo drives provide supply voltage for all the feedback options

2.2.7 Fault Protection

The Cello includes built-in protection against possible fault conditions, including:

- Software error handling
- Status reporting for a large number of possible fault conditions
- Protection against conditions such as excessive temperature, under/over voltage, loss of commutation signal, short circuits between the motor power outputs and between each output and power input return
- Recovery from loss of commutation signals and from communication errors

2.3 System Architecture

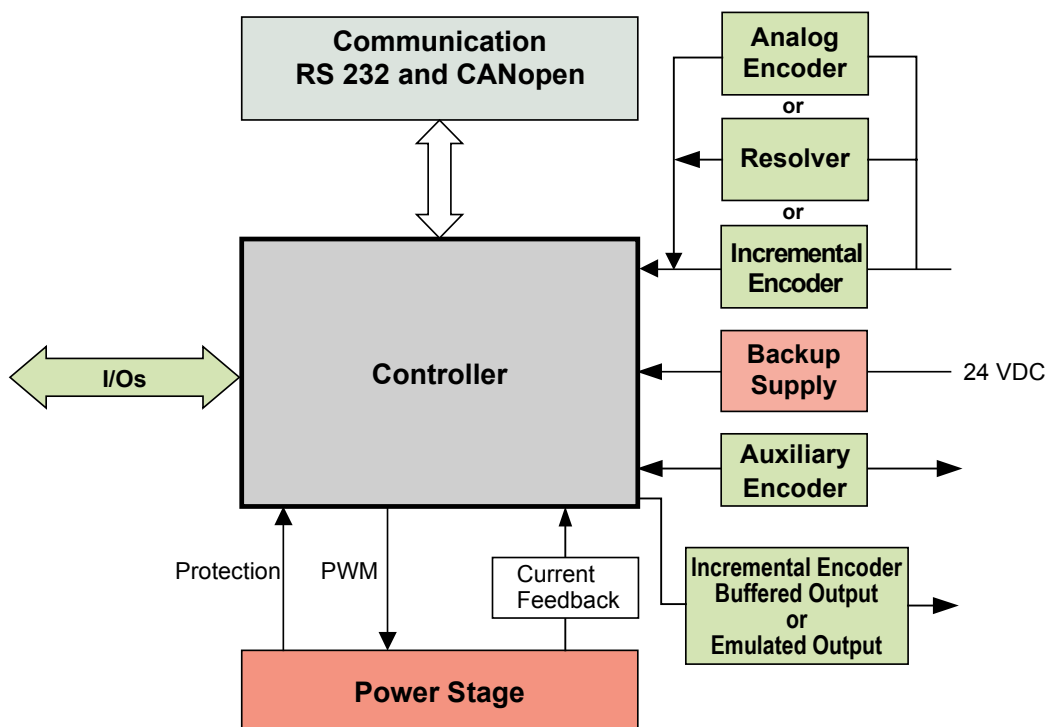


Figure 2-1 Cello System Block Diagram

2.4 How to Use this Guide

In order to install and operate your Elmo Cello servo drive, you will use this manual in conjunction with a set of Elmo documentation. Installation is your first step; after carefully reading the safety instructions in the first chapter, the following chapters provide you with installation instructions as follows:

[Chapter 3, Installation](#), provides step-by-step instructions for unpacking, mounting, connecting and powering up the Cello.

The [Appendix, Technical Specifications](#), lists all the drive ratings and specifications.

Upon completing the instructions in this guide, your Cello servo drive should be successfully mounted and installed. From this stage, you need to consult higher-level Elmo documentation in order to set up and fine-tune the system for optimal operation. The following figure describes the accompanying documentation that you will require.

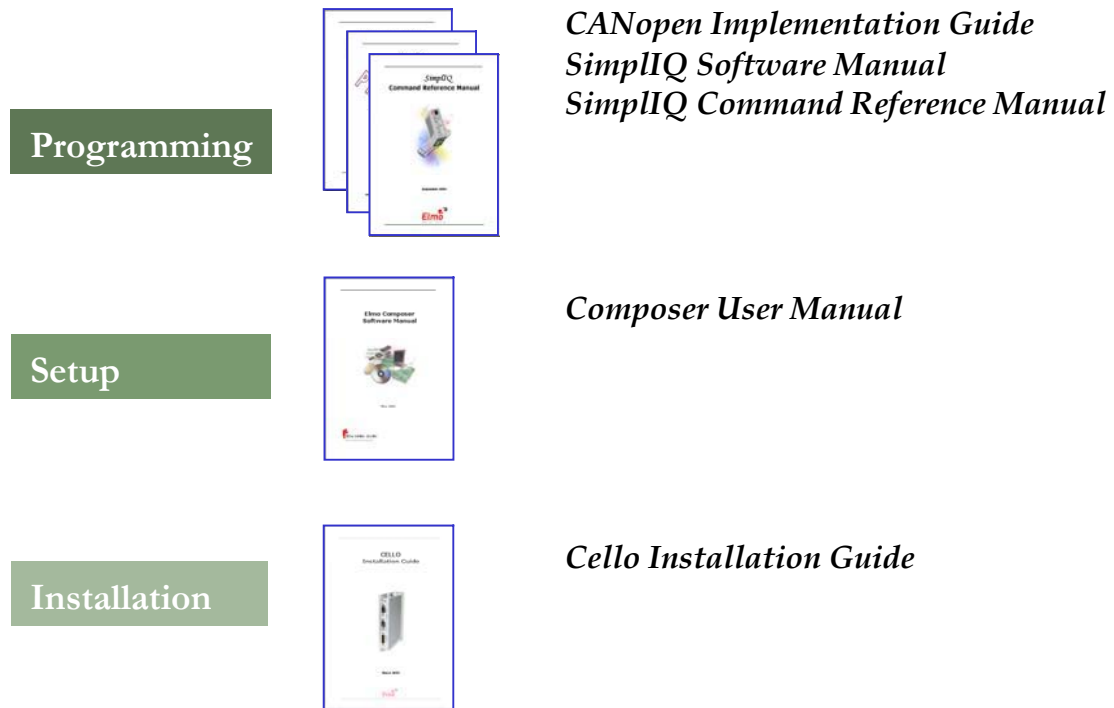


Figure 2-2: Elmo Documentation Hierarchy

As depicted in the previous figure, this installation guide is an integral part of the Cello documentation set, comprising:

- The *Composer Software Manual*, which includes explanations of all the software tools that are part of Elmo’s Composer software environment.
- The *SimplIQ Command Reference Manual*, which describes, in detail, each software command used to manipulate the Cello motion controller.
- The *SimplIQ Software Manual*, which describes the comprehensive software used with the Cello.


Chapter 3: Installation

3.1 Before You Begin

3.1.1 Site Requirements

You can guarantee the safe operation of the Cello by ensuring that it is installed in an appropriate environment.



Feature	Value
Ambient operating temperature	0° to 40°C (32° to 113°F)
Maximum operating altitude	10,000 m (30,000 ft)
Maximum relative humidity	90% non-condensing
Operating area atmosphere	No flammable gases or vapors permitted in area
Models for extended environmental conditions are available.	











The Cello dissipates its heat by natural convection. The maximum operating ambient temperature of 0 to 40° C (32 to 104° F) must not be exceeded.

3.1.2 Hardware Requirements

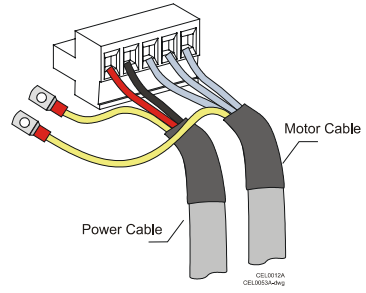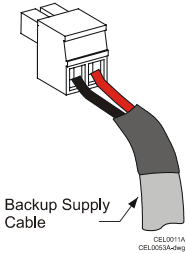The components that you will need to install your Cello are:

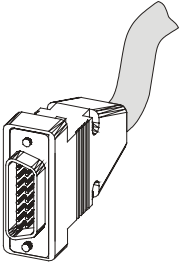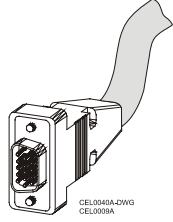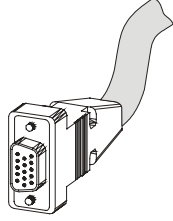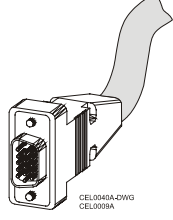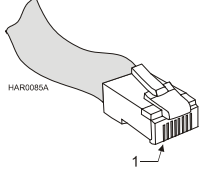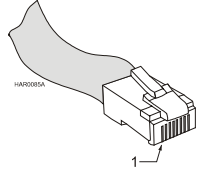Component	Connector	Described in Section	Diagram
Main Power Cable	VP+ PR	3.4.2.2	
Motor Cable	M1 M2 M3	3.4.2.1	
Back-up Supply Cable (if needed)	24v	3.4.3	

Component	Connector	Described in Section	Diagram
Main Feedback Cable	FEEDBACK A	3.4.5	
Auxiliary Feedback Cable (if needed)	FEEDBACK B	3.4.7	
Digital I/O Cable (if needed)	GENERAL I/O J1	3.4.8.1	
Digital Inputs and Analog Inputs Cable (if needed)	GENERAL I/O J2	3.4.8.2	
RS232 Communication Cable	RS232	3.4.9.1	
CANopen Communication cable(s) (if needed)	CAN (in) CAN (out)	3.4.9.2	
PC for drive setup and tuning			
Motor data sheet or manual			

3.2 Unpacking the Drive Components


Before you begin working with the Cello system, verify that you have all of its components, as follows:

- The Cello servo drive
- The Composer software and software manual


The Cello is shipped in a cardboard box with styrofoam protection.

To unpack the Cello:

1. Carefully remove the servo drive from the box and the Styrofoam.
2. Check the drive to ensure that there is no visible damage to the instrument. If any damage has occurred, report it immediately to the carrier that delivered your drive.
3. To ensure that the Cello you have unpacked is the appropriate type for your requirements, locate the part number sticker on the side of the Cello. It looks like this:



P/N: CEL-15/100
S/N: CEL2055003



CEL0008A

The P/N number at the top gives the type designation as follows:

CEL-A15/100R

<p>Version:</p> <ul style="list-style-type: none"> Blank = Standard A = Advanced <p>Continuous Current (Amps)</p> <p>Maximum DC Operating Voltage</p>	<p>Feedback:</p> <ul style="list-style-type: none"> Blank = Incremental Encoder and/or Halls R = Resolver I = Interpolated Analog Encoder
--	---

4. Verify that the Cello type is the one that you ordered, and ensure that the voltage meets your specific requirements.

3.3 Mounting the Cello

The Cello has been designed for two standard mounting options:

- “Wall Mount” along the back (can also be mounted horizontally on a metal surface)
- “Book Shelf” along the side

M4 round head screws, one through each opening in the heat sink, are used to mount the Cello (see the diagram below).

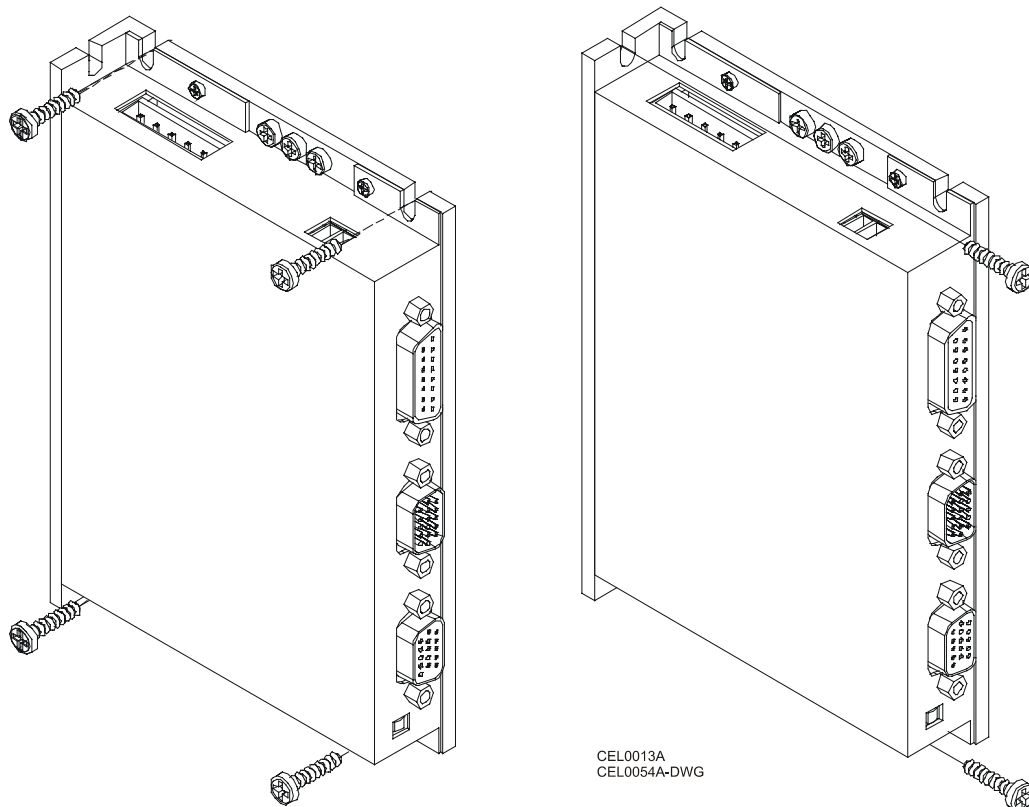


Figure 3-1: Mounting the Cello

3.4 Connecting the Cables

3.4.1 Wiring the Cello

Once the Cello is mounted, you are ready to wire the device. Proper wiring, grounding and shielding are essential for ensuring safe, immune and optimal servo performance of the Cello.



Follow these instructions to ensure safe and proper wiring:

- Use twisted pair shielded cables for control, feedback and communication connections. For best results, the cable should have an aluminum foil shield covered by copper braid, and should contain a drain wire.

The drain wire is a non-insulated wire that is in contact with parts of the cable, usually the shield. It is used to terminate the shield and as a grounding connection.

- The impedance of the wire must be as low as possible. The size of the wire must be thicker than actually required by the carrying current. A 24, 26 or 28 AWG wire for control and feedback cables is satisfactory although 24 AWG is recommended.
- Use shielded wires for motor connections as well. If the wires are long, ensure that the capacitance between the wires is not too high: $C < 30 \text{ nF}$ is satisfactory for most applications.
- Keep all wires and cables as short as possible.
- Keep the motor wires as far away as possible from the feedback, control and communication cables.
- Ensure that in normal operating conditions, the shielded wires and drain carry *no current*. The only time these conductors carry current is under abnormal conditions, when electrical equipment has become a potential shock or fire hazard while conducting external EMI interferences directly to ground, in order to prevent them from affecting the drive. Failing to meet this requirement can result in drive/controller/host failure.
- After completing the wiring, carefully inspect all wires to ensure tightness, good solder joints and general safety.

The following connectors are used for wiring the Cello.

Type	Function	Port	Connector Location
5-pin Pheonix (1 st two pins) (provided)	Power	VP+, PR	
5-pin Pheonix (last 3 pins) (provided)	Motor	M1, M2, M3	
3 ground screws	Ground	PE, PE, PE	
2-pin Pheonix (provided)	Optional Back-up Supply	24 VDC	

Table 3-1: Connectors on the “Bottom” of the Cello

Type	Function	Port	Connector Location
15-pin D-Sub	Feedback A	Feedback A	
15-pin D-Sub (high-density)	General I/O	J1	
15-pin D-Sub (high-density)	General I/O	J2	

Table 3-2: Connectors on the “Front” of the Cello

Type	Function	Port	Connector Location
8-pin RJ-45	CANopen	CAN	
8-pin RJ-45	CANopen	CAN	
15-pin D-Sub (high-density)	Feedback B	Feedback B	
8-pin RJ-45	RS-232	RS-232	

Table 3-3: Connectors on the "Top" of the Cello

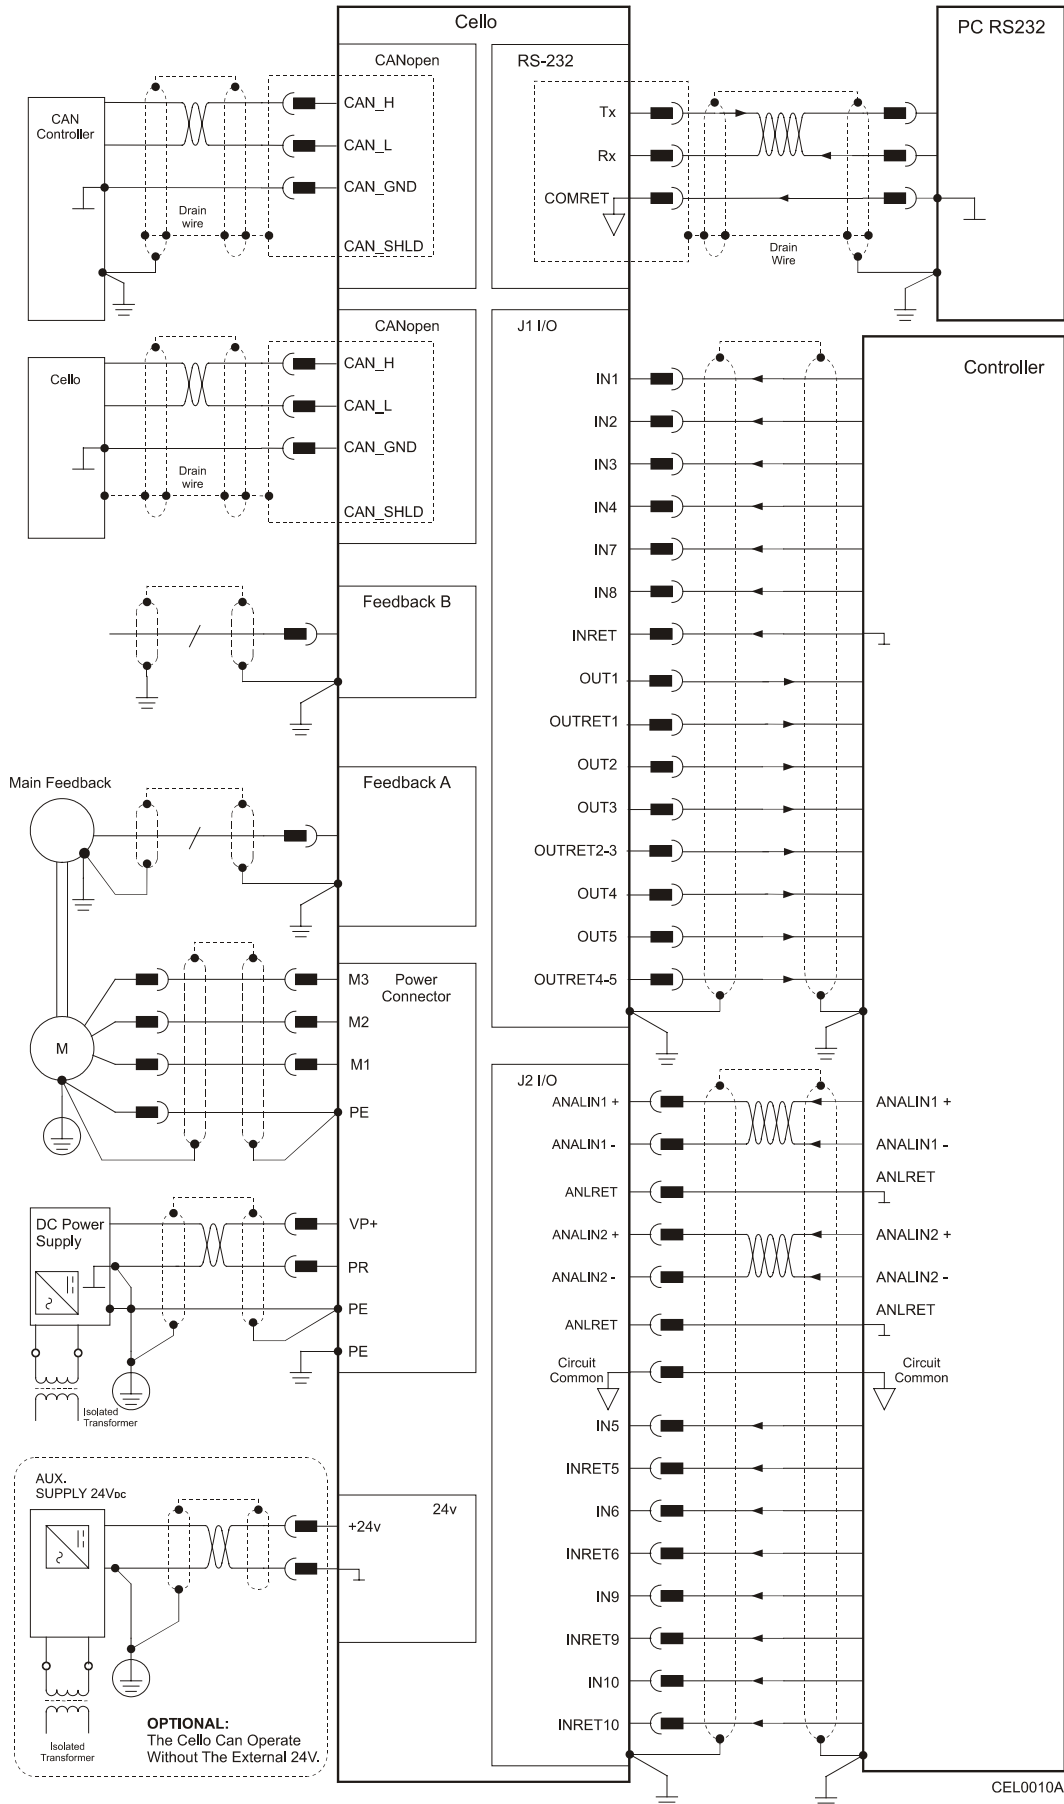


Figure 3-2: Cello Detailed Connection Diagram

3.4.2 Connecting the Power Cables

The main power connector located at the bottom of the Cello, as follows:

Pin	Function	Cable		Pin Positions
		AC Motor Cable	DC Motor Cable	
VP+	Pos. Power input	Power		
PR	Power return	Power		
PE	Protective earth	Power		
		AC Motor Cable	DC Motor Cable	
PE	Protective earth	Motor	Motor	
M1	Motor phase	Motor	N/C	
M2	Motor phase	Motor	Motor	
M3	Motor phase	Motor	Motor	
	When connecting several motors, all must be wired in an identical manner.			

Table 3-4: Connector for Main Power and Motor Cables

3.4.2.1 Connecting the Motor Cable

Connect the motor power cable to the M1, M2, and M3 terminals of the main power connector and the fourth wire to the PE (Protective Earth) on the heat sink (see diagram above). The phase connection order is arbitrary because the Composer will establish the proper commutation automatically during setup.



Notes for connecting the motor cables:

- For best immunity, it is highly recommended to use a shielded (not twisted) cable for the motor connection. A 4-wire shielded cable should be used. The gauge is determined by the actual current consumption of the motor.
- Connect the shield of the cable to the closest ground connection at the motor end.
- Connect the shield of the cable to the PE terminal on the Cello.
- Be sure that the motor chassis is properly grounded.

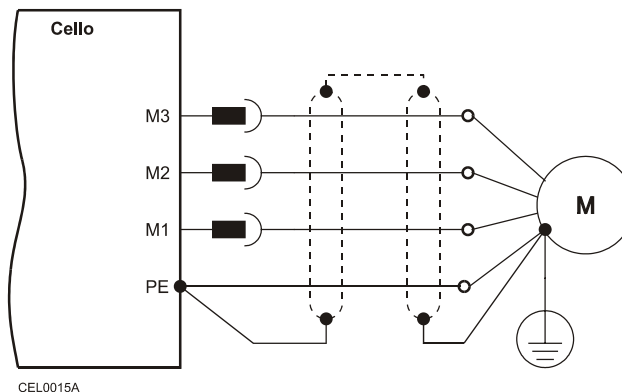


Figure 3-3: AC Motor Power Connection Diagram

3.4.2.2 Connecting the Main Power Cable

Connect the main power supply cable to the VP+ and PR terminals of the main power connector. Connect the Protective Earth wire to the PE terminal on the Cello's heatsink.



Notes for connecting the DC power supply:

- Be sure to isolate the source of the DC power supply.
- For best immunity, it is highly recommended to use twisted cables for the DC power supply cable. A 3-wire shielded cable should be used. The gauge is determined by the actual current consumption of the motor.
- Connect both ends of the cable shield to the closest ground connection, one end near the power supply and the other end to the PE terminal on the Cello's heatsink.
- For safety reasons connect the PR of the power supply to the closest ground connection.

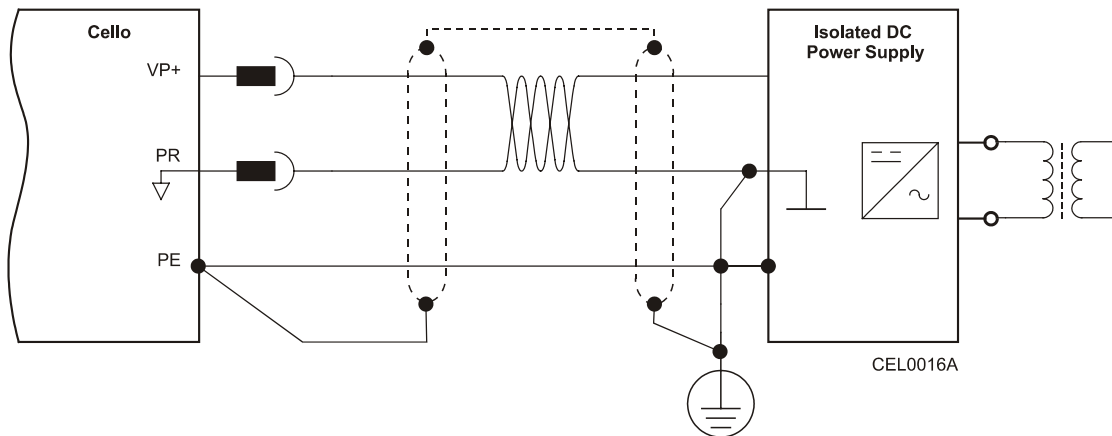


Figure 3-4: Main Power Supply Connection Diagram

3.4.3 Connecting the Optional Back-up Supply Cable (24v)

Power to the Cello is provided by a 10 to 195 VDC source. A “smart” control-supply algorithm enables the Cello to operate with the power supply only, *with no need for an auxiliary 24 volt supply*. If backup functionality is required for storing control parameters in case of power-outs, an external 24 VDC power supply can be connected, providing maximum flexibility and optional backup functionality when needed.

To connect the back-up supply to the 24v port on the bottom of the Cello, use the 2-pin power plug provided with the Cello. *Remember, you are working with DC power; be sure to exercise caution.* The required voltage is 24 VDC.



Notes for 24 VDC back-up supply connections:

- Use a 24 AWG twisted pair shielded cable. The shield should have copper braid.
- The source of the 24 VDC must be isolated.
- For safety reasons, connect the return of the 24 VDC source to the closest ground.
- Connect the cable shield to the closest ground near the 24 VDC source.
- Before applying power, first verify the polarity of the connection.

Pin	Signal	Function	Pin Position
[+]	+24VDC	+24 VDC back-up supply	
[-]	RET24VDC	Return (common) of the 24 VDC back-up supply	

Table 3-5: Back-up Cable Plug

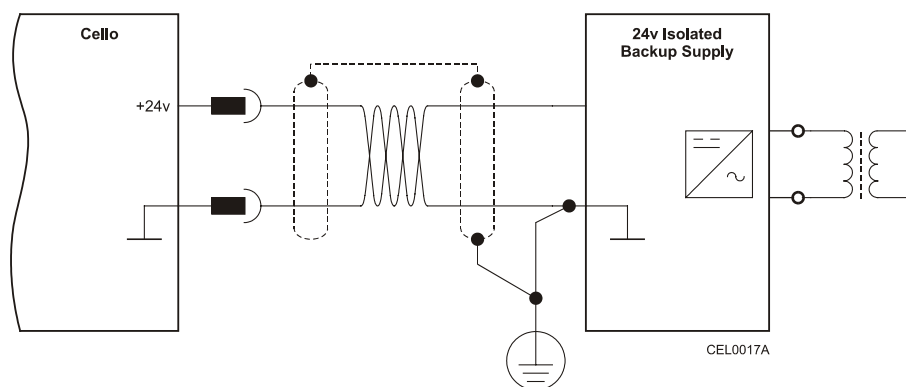


Figure 3-5: Back-up Supply (24v) Connection Diagram

“Smart” Control Supply Options	Internal DC-to-DC converter allowing for operation from DC power (no need for auxiliary external 24 VDC supply for normal operation).
	24 VDC supply for backing up the control parameters if DC power is shut off.

3.4.4 Feedback and Control Cable Assemblies

The Cello features easy-to-use D-sub type connections for all Control and Feedback cables. Below are instructions and diagrams describing how to assemble those cables.

- Use 24, 26 or 28 AWG twisted-pair shielded cables (24 AWG cable is recommended). For best results, the shield should have aluminum foil covered by copper braid.
- Use only a D-sub connector with a **metal housing**.
- Attach the braid shield tightly to the metal housing of the D-type connector.
- On the motor side connections, ground the shield to the motor chassis.
- On controller side connections, follow the controller manufacturer's recommendations concerning the shield.

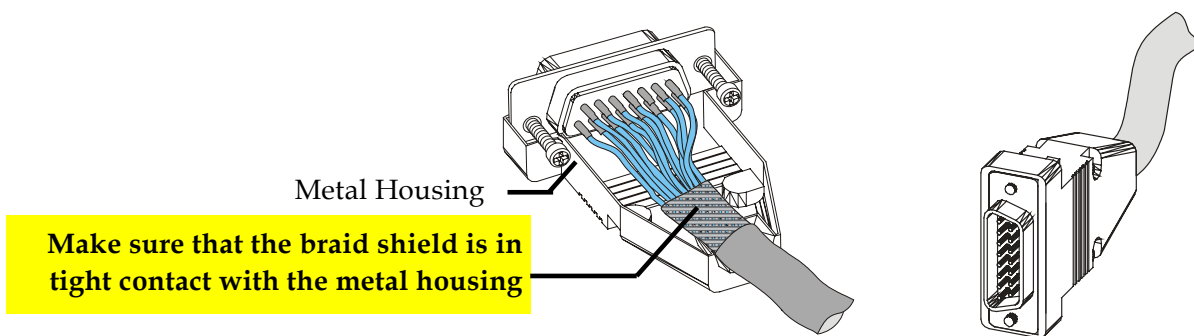


Figure 3-6: Feedback and Control Cable Assemblies



Note: All D-sub type connectors, used with the Cello, should be assembled in this way.

3.4.5 Main Feedback Cable (FEEDBACK A)

The main feedback cable is used to transfer feedback data from the motor to the drive.


The Cello accepts the following as a main feedback mechanism:

- Incremental encoder only
- Incremental encoder with digital Hall sensors
- Digital Hall sensors only
- Incremental Analog (Sine/Cosine) encoder (option)
- Resolver (option)

FEEDBACK A on the “front” of the Cello has a 15-pin D-sub socket. Connect the Main Feedback cable from the motor to FEEDBACK A using a 15-pin, D-Sub plug with a metal housing. When assembling the Main Feedback cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies).


Pin	Incremental Encoder		Interpolated Analog Encoder		Resolver	
	Signal	Function	Signal	Function	Signal	Function
	CEL XX/YYY_		CEL XX/YYYYI		CEL XX/YYYYR	
1	HC	Hall sensor C input	NC	-	NC	-
2	HA	Hall sensor A input	NC	-	NC	-
3	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
4	+5V	Encoder/Hall +5V supply	+5V	Encoder/Hall +5V supply	+5V	Encoder/Hall +5V supply
5	CHA-	Channel A complement	A-	Sine A complement	S3	Sine A complement
6	CHA	Channel A	A+	Sine A	S1	Sine A
7	INDEX-	Index complement	R-	Reference complement	R2	Vref complement f= 1/TS, 50mA Maximum
8	INDEX	Index	R+	Reference	R1	Vref f=1/TS, 50mA Max.
9	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
10	HB	Hall sensor B input	NC	-	NC	-
11	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
12	+5V	Encoder/Hall +5V supply	+5V	Encoder/Hall +5V supply	+5V	Encoder/Hall +5V supply
13	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
14	CHB-	Channel B complement	B-	Cosine B complement	S4	Cosine B complement
15	CHB	Channel B	B+	Cosine B	S2	Cosine B

Table 3-6: Main Feedback Cable Pin Assignments

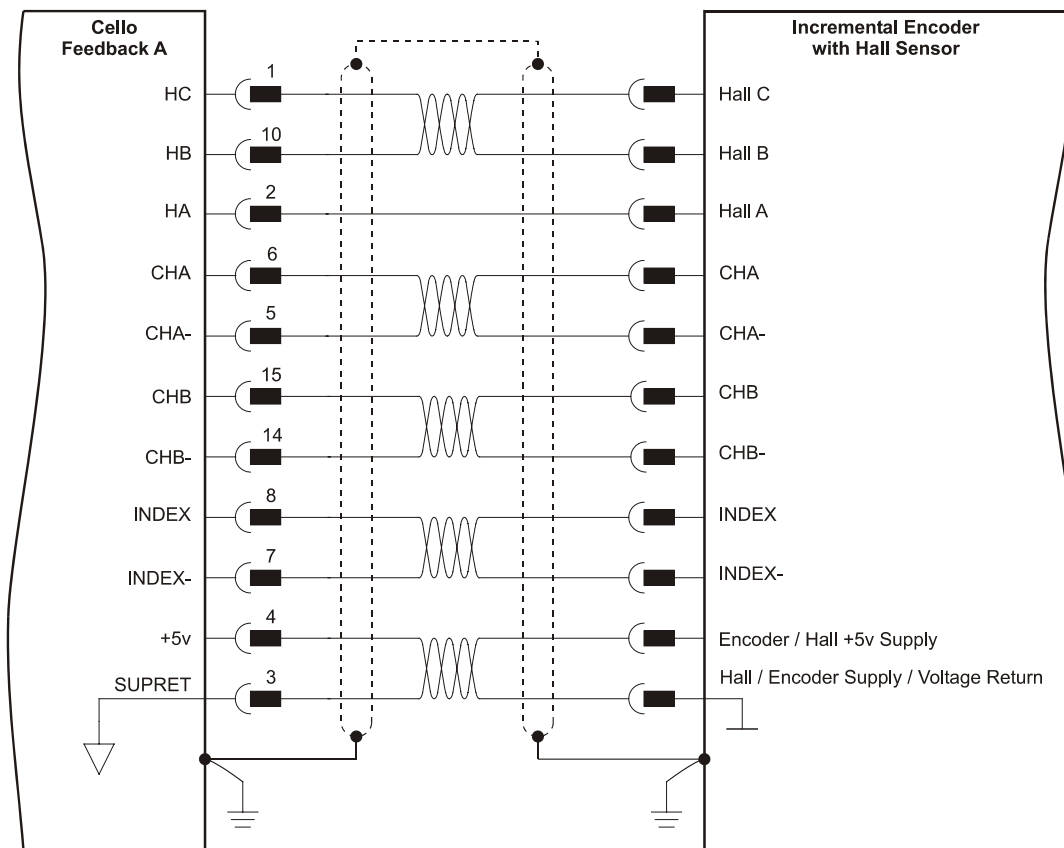


CEL0019A

Figure 3-7: Main Feedback- Incremental Encoder Connection Diagram

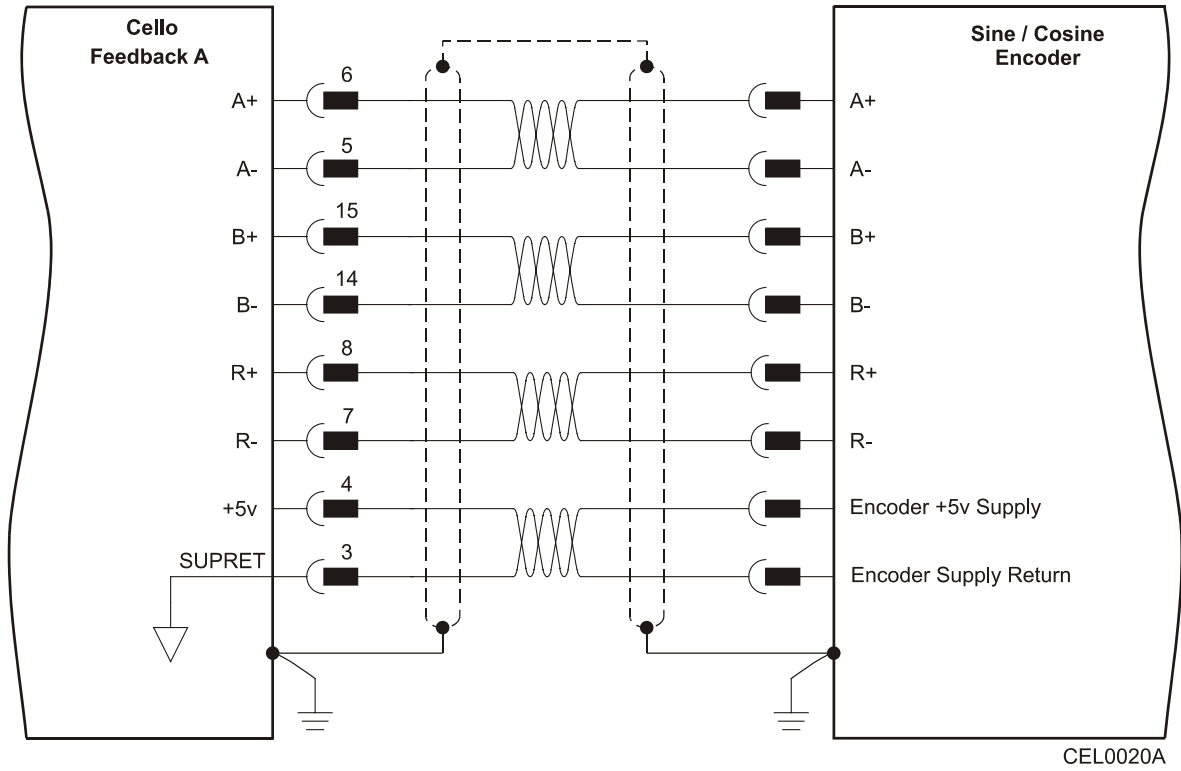

CEL0020A

Figure 3-8: Main Feedback - Interpolated Analog Encoder Connection Diagram

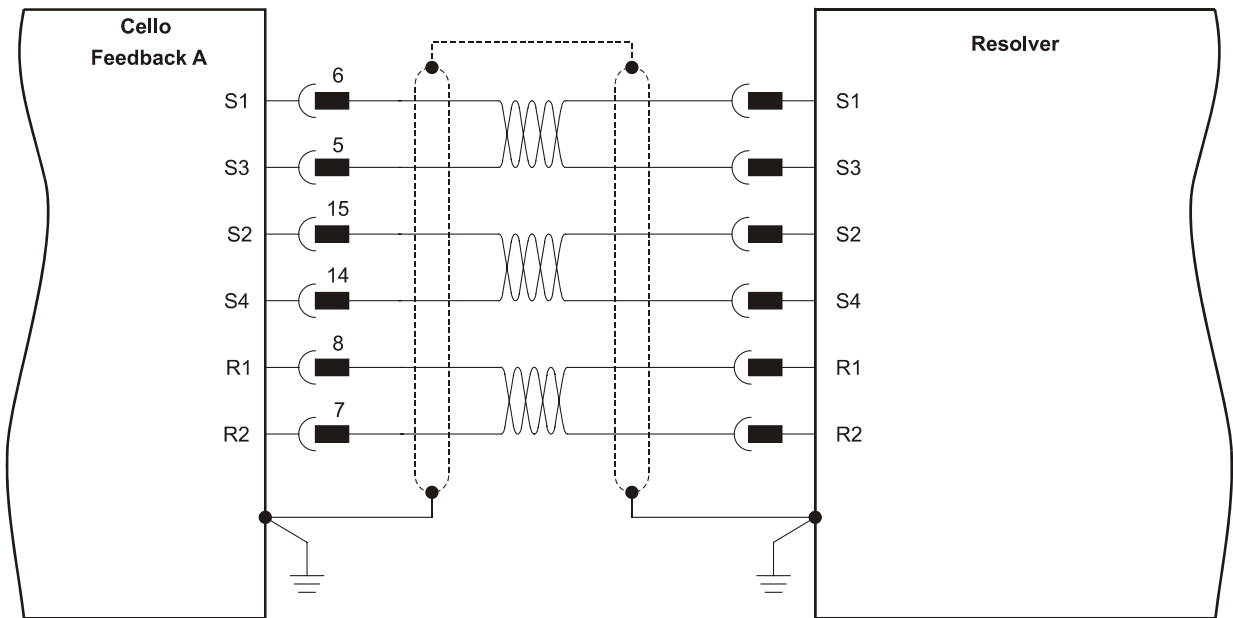

CEL0021A

Figure 3-9: Main Feedback - Resolver Connection Diagram

3.4.6 Main and Auxiliary Feedback Combinations

The Main Feedback is always used in motion control devices whereas Auxiliary Feedback is often, but not always used. The Auxiliary Feedback connector on the Cello, "FEEDBACK B" has two ports, Port B1 and Port B2. When used in combination with the Main Feedback port, "FEEDBACK A", the ports can be set, by software, as follows:

<i>SW Setting</i>		FEEDBACK B Ports B1 and B2		
FEEDBACK A		YA[4] = 4	YA[4] = 2	YA[4] = 0
Incremental Encoder Input	★			
Interpolated Analog (Sin/Cos) Encoder Input	★			
Resolver Input	★			
Typical Applications		<ul style="list-style-type: none"> ★ Any application where the main encoder is used, not only for the drive, but also for other purposes such as position controllers and/or other drives. ★ Analog Encoder applications where position data is required in the Encoder's quadrature format. ★ Resolver applications where position data is required in the Encoder's quadrature format. 	<p>Any application where two feedbacks are used by the drive.</p> <p>Port B1 serves as an input for the auxiliary incremental encoder (differential or single-ended).</p> <p>Port B2 is used to output differential buffered Auxiliary Incremental Encoder signals.</p> <p>For applications such as Follower, ECAM, or Dual Loop.</p>	<p>Port B1 serves as an input for Pulse & Direction commands (differential or single-ended).</p> <p>Port B2 is used to output differential buffered Pulse & Direction signals.</p>

3.4.7 Auxiliary Feedback (FEEDBACK B)

When using one of the auxiliary feedback options, the relevant functionality of FEEDBACK B ports are software selected for that option. Refer to the *Cello Command Reference Manual* for detailed information about FEEDBACK B setup.

3.4.7.1 Main Encoder Buffered Outputs or Emulated Encoder Outputs Option on FEEDBACK B (YA[4]=4)

Through FEEDBACK B (Ports B1 and B2) the Cello can provide **two simultaneous buffered main, or emulated, encoder signals** to other controllers or drives. This option can be used when:

- The Cello is used as a current amplifier to provide position data to the position controller.
- The Cello is used in velocity mode, to provide position data to the position controller.
- The Cello is used as a master in Follower or ECAM mode.

Below are the signals on the Auxiliary Feedback ports when set up to run as a buffered outputs or emulated outputs of the main encoder (on FEEDBACK A):



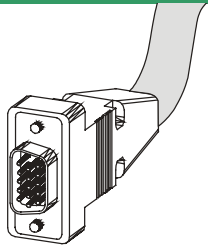
Port	Pin	Signal	Function	Pin Position
B1	1	CHA	Auxiliary channel A high <i>output</i>	
B1	2	CHA-	Auxiliary channel A low <i>output</i>	
B1	3	CHB	Auxiliary channel B high <i>output</i>	
B1	4	CHB-	Auxiliary channel B low <i>output</i>	
B1	5	INDEX	Auxiliary Index high <i>output</i>	
B2	6	CHAO	Buffered channel A output	
B2	7	CHAO-	Buffered channel A complement output	
PWR	8	+5V	Encoder supply voltage	
PWR	9	SUPRET	Encoder supply voltage return	
B1	10	INDEX-	Auxiliary Index low <i>output</i>	
B2	11	CHBO	Buffered channel B output	
B2	12	CHBO-	Buffered channel B complement output	
B2	13	INDEXO	Buffered Index output	
B2	14	INDEXO-	Buffered Index complement output	
PWR	15	SUPRET	Supply return	

Table 3-7: Main Encoder Buffered Outputs or Emulated Encoder Outputs on FEEDBACK B - Pin Assignments

FEEDBACK B on the “top” of the Cello has a 15-pin high density D-sub socket. Connect the Auxiliary Feedback cable, from the controller or other device, to FEEDBACK B using a 15-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies).

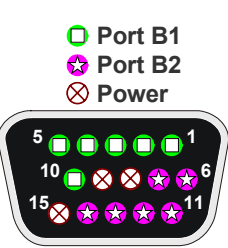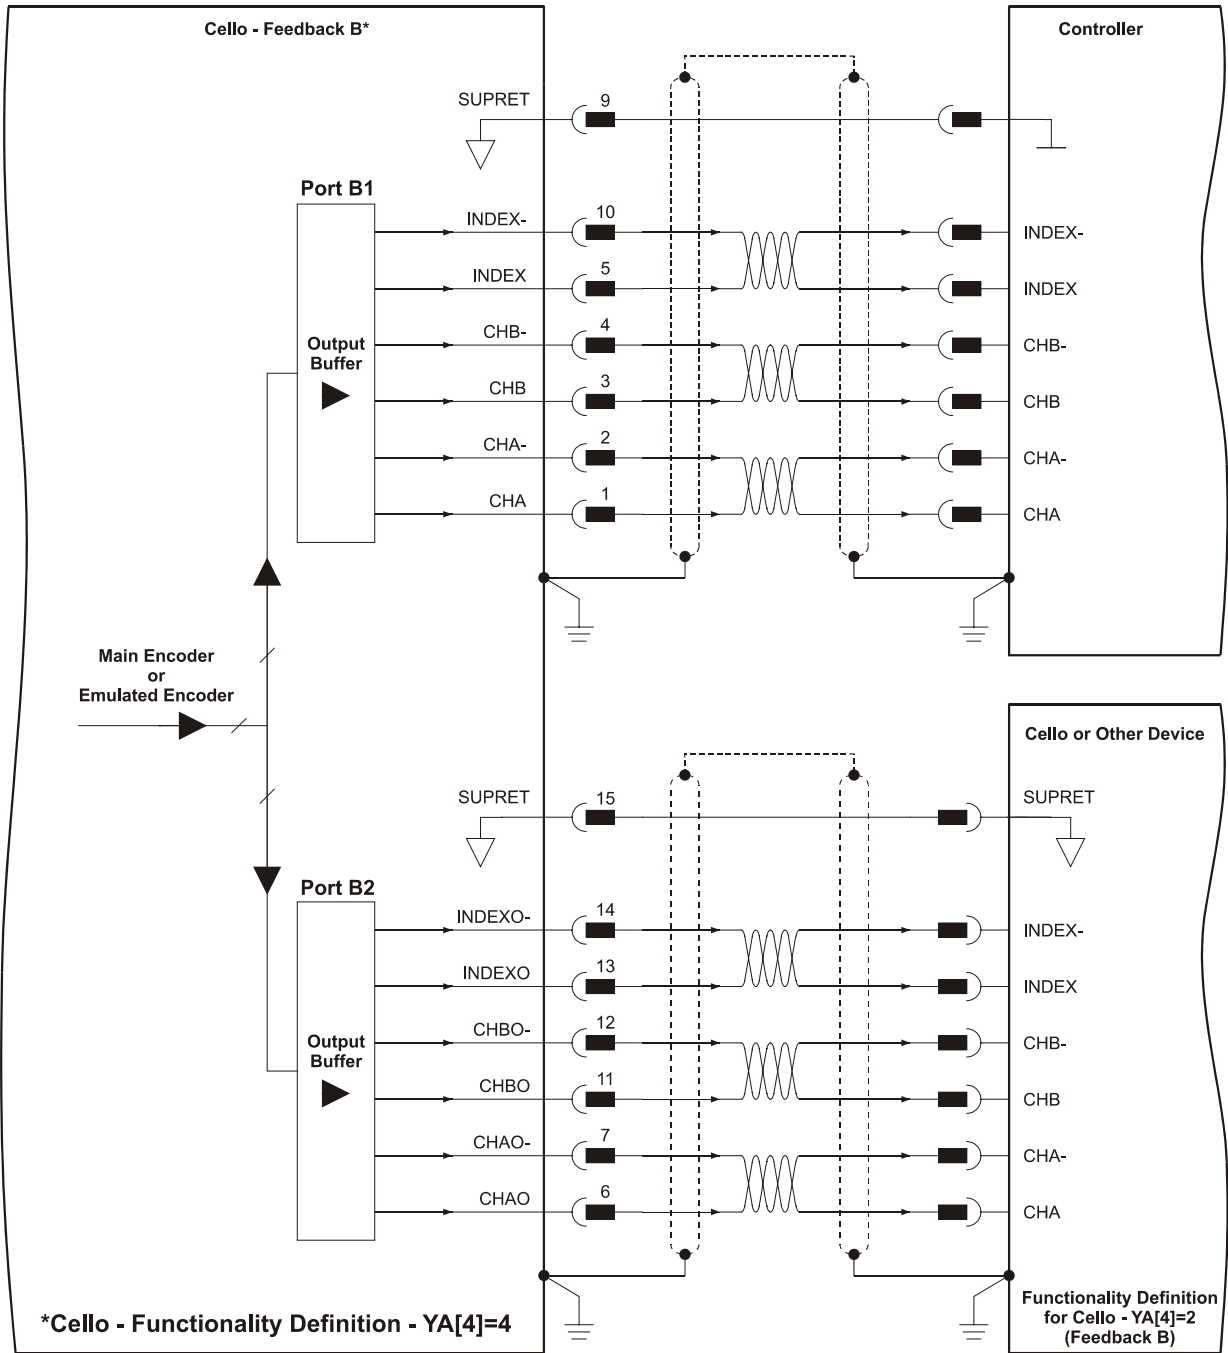

CEL0026A

Figure 3-10: Main Encoder Buffered Output or Emulated Encoder Output on FEEDBACK B - Connection Diagram

3.4.7.2 Differential Auxiliary Encoder Input Option on FEEDBACK B (YA[4]=2)

The Cello can be used as a slave by receiving the position of the master encoder data (on Port B1) in Follower or ECAM mode. In this mode Port B2 provides **differential buffered auxiliary outputs** for the next slave axis in follower or ECAM mode.

Below are the signals on the Auxiliary Feedback port when set up to run as a differential auxiliary encoder input:



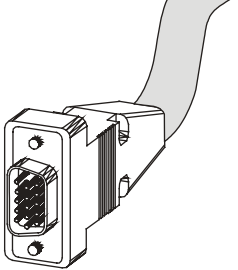
Port	Pin	Signal	Function	Pin Position
B1	1	CHA	Auxiliary channel A high <i>input</i>	
B1	2	CHA-	Auxiliary channel A low <i>input</i>	
B1	3	CHB	Auxiliary channel B high <i>input</i>	
B1	4	CHB-	Auxiliary channel B low <i>input</i>	
B1	5	INDEX	Auxiliary Index high <i>input</i>	
B2	6	CHAO	Buffered channel A output	15 Pin high density D-Sub Plug
B2	7	CHAO-	Buffered channel A complement output	
PWR	8	+5V	Encoder supply voltage	
PWR	9	SUPRET	Encoder supply voltage return	
B1	10	INDEX-	Auxiliary Index low <i>input</i>	
B2	11	CHBO	Buffered channel B output	
B2	12	CHBO-	Buffered channel B complement output	
B2	13	INDEXO	Buffered Index output	
B2	14	INDEXO-	Buffered Index complement output	
PWR	15	SUPRET	Supply return	

Table 3-8: Differential Auxiliary Encoder Input Option on FEEDBACK B Pin Assignments

FEEDBACK B on the “top” of the Cello has a 15-pin high density D-sub socket. Connect the Auxiliary Feedback cable from the feedback device to FEEDBACK B using a 15-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies).

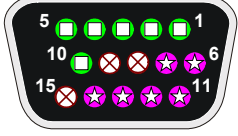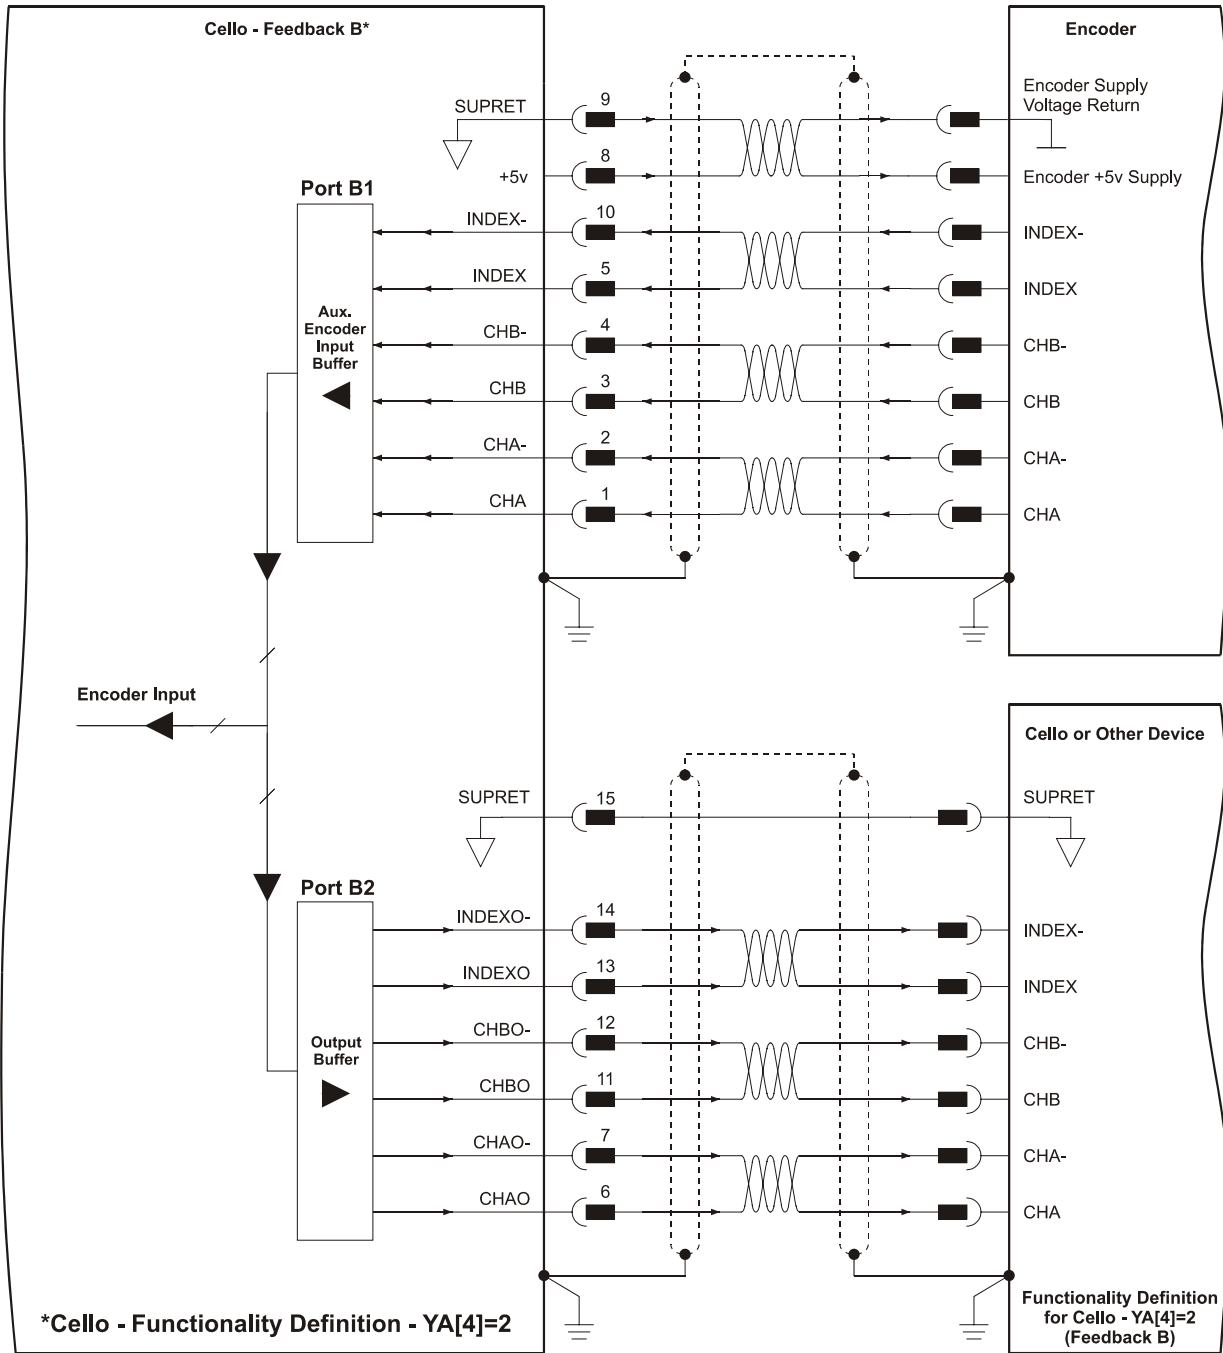

CEL0028A

Figure 3-11: Differential Auxiliary Encoder Input Option on FEEDBACK B - Connection Diagram

3.4.7.3 Single-ended Auxiliary Input Option on FEEDBACK B (YA[4]=2)

The Cello can be used as a slave by receiving the position data (on Port B1) of the master encoder in Follower or ECAM mode. In this mode Port B2 provides **differential buffered auxiliary outputs** for the next slave axis in Follower or ECAM mode.

Below are the signals on the Auxiliary Feedback ports when set up to run as a single-ended auxiliary input:


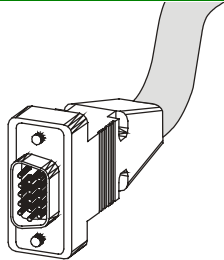
Port	Pin	Signal	Function	Pin Position
B1	1	CHA	Auxiliary channel A high <i>input</i>	 15 Pin high density D-Sub Plug
	2	NC	Do not connect this pin	
B1	3	CHB	Auxiliary channel B high <i>input</i>	
	4	NC	Do not connect this pin	
B1	5	INDEX	Auxiliary Index high <i>input</i>	
B2	6	CHAO	Channel A output	
B2	7	CHAO-	Channel A complement output	
PWR	8	+5V	Encoder supply voltage	
PWR	9	SUPRET	Encoder supply voltage return	
	10	NC	Do not connect this pin	
B2	11	CHBO	Channel B output	
B2	12	CHBO-	Channel B complement output	
B2	13	INDEXO	Index output	
B2	14	INDEXO-	Index complement output	
PWR	15	SUPRET	Supply return	

Table 3-9: Single-ended Auxiliary Encoder Option on FEEDBACK B - Pin Assignments

FEEDBACK B on the “top” of the Cello has a 15-pin high density D-sub socket. Connect the Auxiliary Feedback cable from the feedback device to FEEDBACK B using a 15-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies).

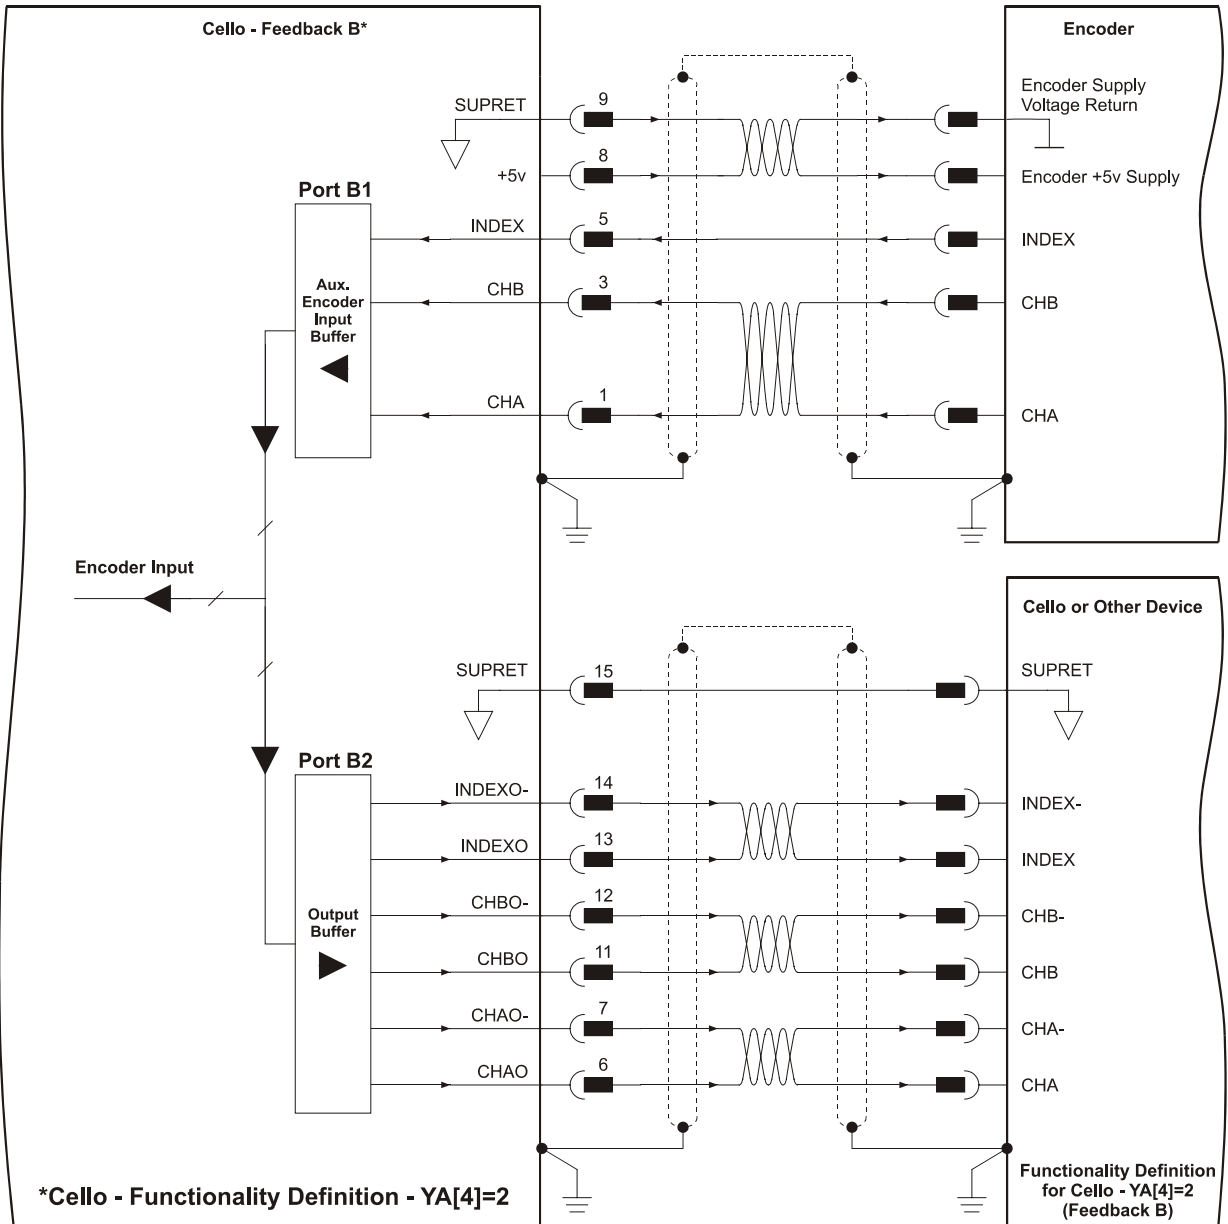

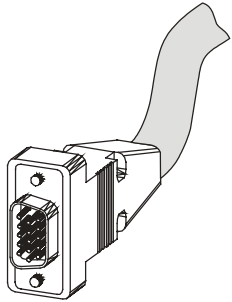
CEL0029A

Figure 3-12: Single-ended Auxiliary Input Option on FEEDBACK B - Connection Diagram

3.4.7.4 Pulse-and-Direction Input Option on FEEDBACK B (YA[4]=0)


This mode is used for input of differential or single-ended pulse-and-direction position commands on Port B1. In this mode Port B2 provides **differential buffered pulse-and-direction outputs** for another axis.

Below are the signals on the Auxiliary Feedback ports when set up to run as a single-ended pulse-and-direction input:

Port	Pin	Signal	Function	Pin Position
B1	1	PULS/CHA	Pulse/ Auxiliary channel A high <i>input</i>	 15 Pin D-Sub Plug
	2	NC	Do not connect this pin	
B1	3	DIR/CHB	Direction/ Auxiliary channel B high <i>input</i>	
	4	NC	Do not connect this pin	
	5	NC	Do not connect this pin	
B2	6	CHAO	Channel A output	
B2	7	CHAO-	Channel A complement output	
PWR	8	+5V	Encoder supply voltage	
PWR	9	SUPRET	Encoder supply voltage return	
	10	NC	Do not connect this pin	
B2	11	CHBO	Channel B output.	
B2	12	CHBO-	Channel B complement output	
	13	NC	Do not connect this pin	
	14	NC	Do not connect this pin	
PWR	15	SUPRET	Supply return	

15 Pin D-Sub Plug


○ Port B1 ⊗ Power
★ Port B2 ○ N.C.

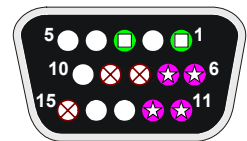

15 Pin D-Sub Socket

Table 3-10: Pulse-and-Direction Auxiliary Encoder Pin Assignment on FEEDBACK B

FEEDBACK B on the “top” of the Cello has a 15-pin high density D-sub socket. Connect the Auxiliary Feedback cable from the Pulse and Direction Controller to FEEDBACK B using a 15-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies).

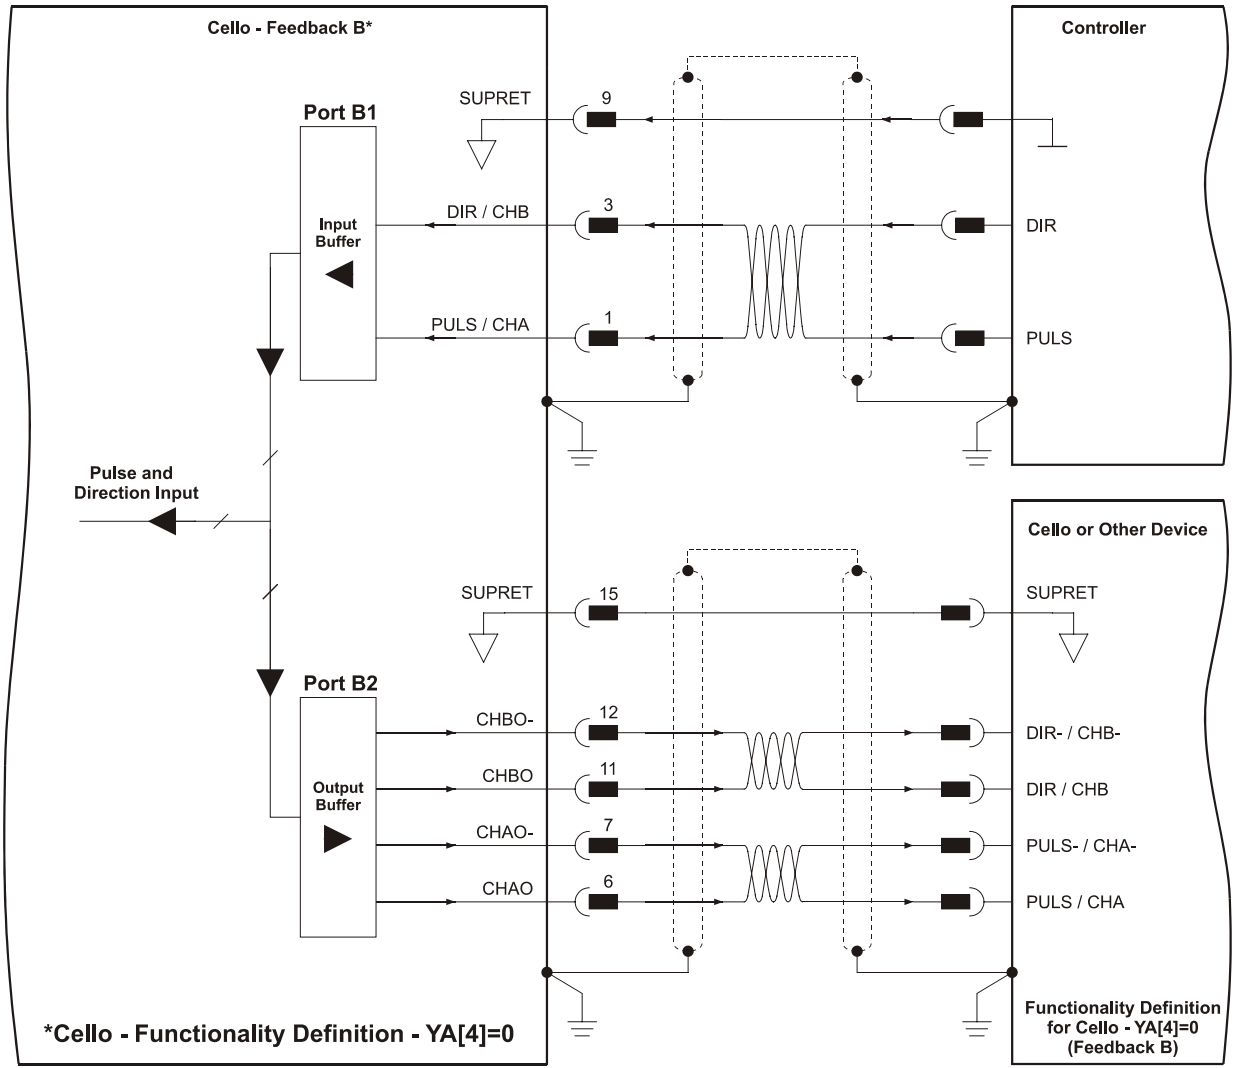

CEL0030A

Figure 3-13: Pulse-and-Direction Input Option on FEEDBACK B - Connection Diagram

3.4.8 I/O Cables

The Cello has two I/O ports, J1 and J2. J1 is a general I/O which can be used to connect 6 digital inputs and 5 digital outputs. J2 is an input port for connecting up to 4 separate digital inputs and 2 analog inputs:

I/O	J1 Port	J2 Port	Total
Digital Input	6	4	10
Digital Output	5	-	5
Analog Input	-	2	2

3.4.8.1 General I/O Port (J1)

Port J1 has a 15-pin high density D-Sub plug. When assembling this I/O cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies) using a 15-pin high density metal case D-sub female connector (socket).

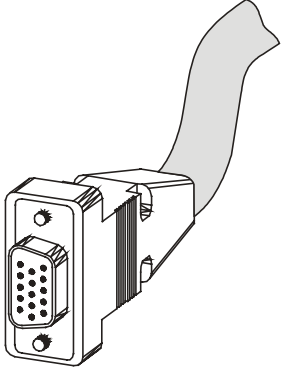
Pin	Signal	Function	Pin Position
1	IN1	Programmable input 1	
2	IN2	Programmable input 2	
3	IN3	Programmable input 3	
4	OUT2	Programmable output 2	
5	OUT3	Programmable output 3	
6	IN4	Programmable input 4	
7	IN7	Programmable input 7	
8	IN8	Programmable input 8	
9	INRET	General input return	
10	OUTRET2-3	Programmable output return 2 & 3	
11	OUT4	Programmable output 4	
12	OUTRET4-5	Programmable output return 4 & 5	
13	OUT5	Programmable output 5	
14	OUT1	Programmable output 1	
15	OUTRET 1	Programmable output return 1	

Table 3-11: J1 I/O Cable - Pin Assignments

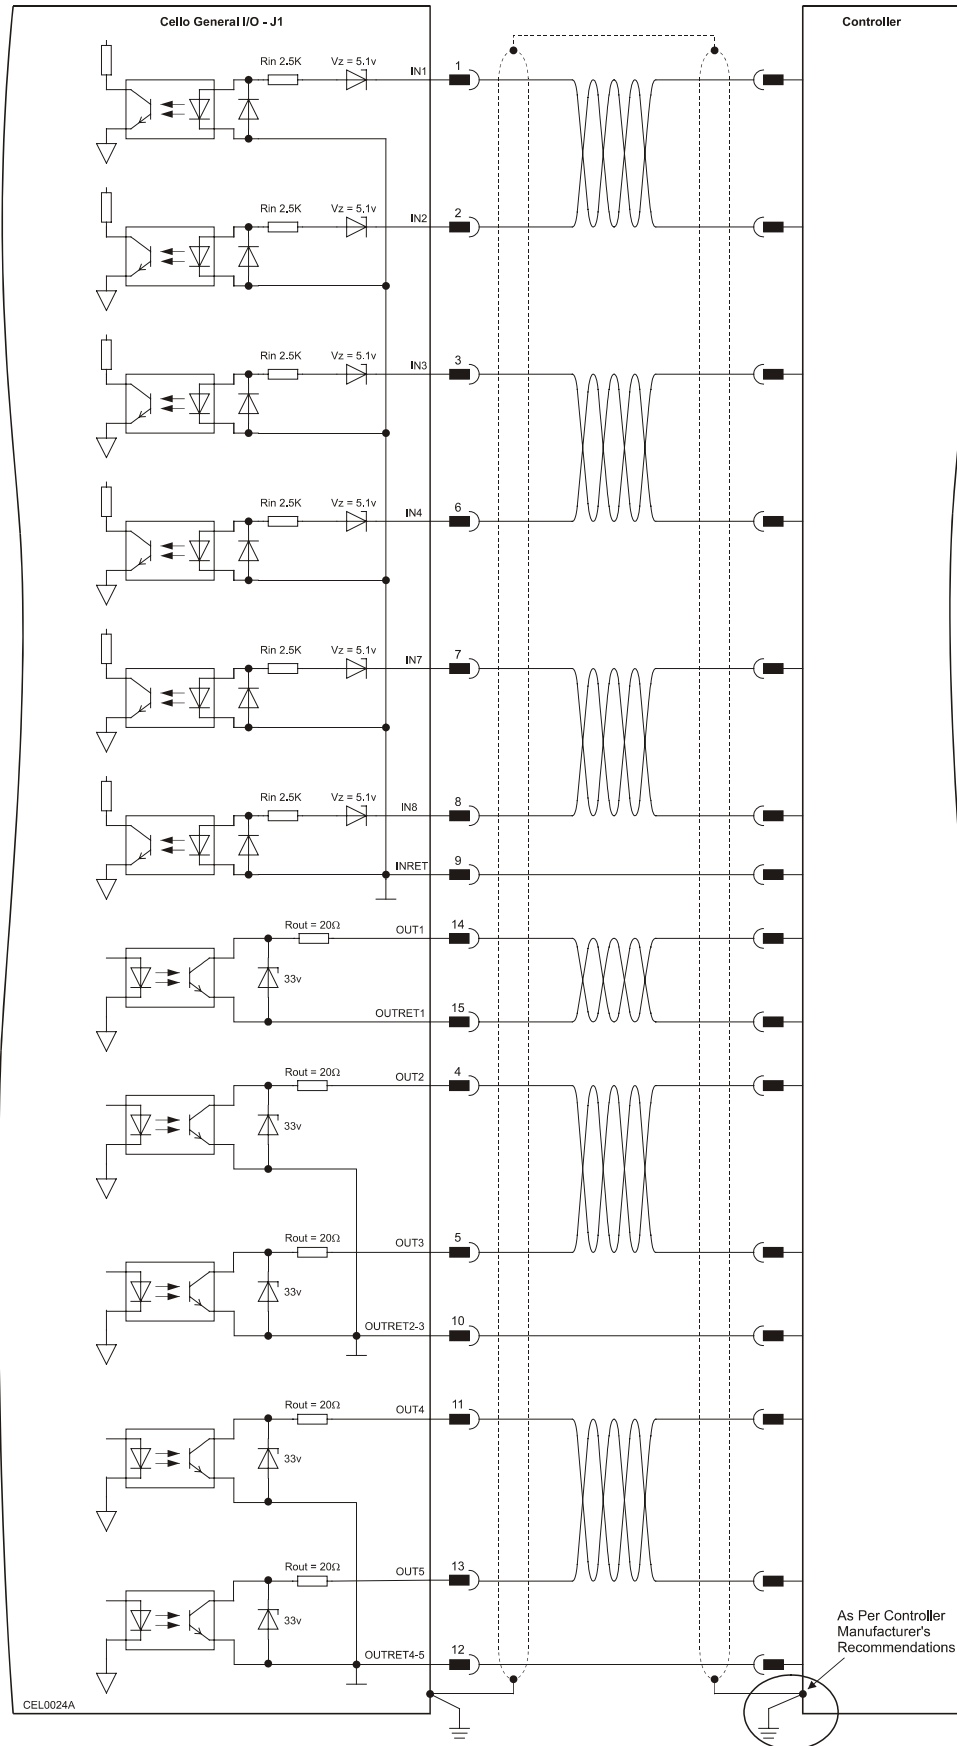


Figure 3-14: General J1 I/O Connection Diagram

3.4.8.2 General Input Port (J2)

Port J2 has a 15-pin high density D-Sub socket. When assembling this I/O cable, follow the instructions in Section 3.4.4 (Feedback and Control Cable Assemblies) using a 15-pin high density metal case D-sub male connector (plug).


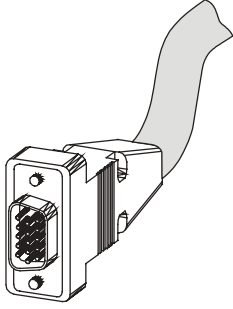
Pin	Signal	Function	Pin Position
1	IN5	Programmable input 5	
2	IN6	Programmable input 6	
3	IN9	Programmable input 9	
4	IN10	Programmable input 10	
5	ANLIN1+	Analog input 1	
6	INRET5	Programmable input return 5	
7	INRET6	Programmable input return 6	
8	INRET9	Programmable input return 9	
9	INRET10	Programmable input return 10	
10	ANLIN1-	Analog input 1	
11	ANLIN2+	Analog input 2	
12	ANLIN2-	Analog input 2	
13	ANLRET	Analog return	
14	ANLRET	Analog return	
15	SUPRET	Supply return	

Table 3-12: General Input J2 Cable - Pin Assignments

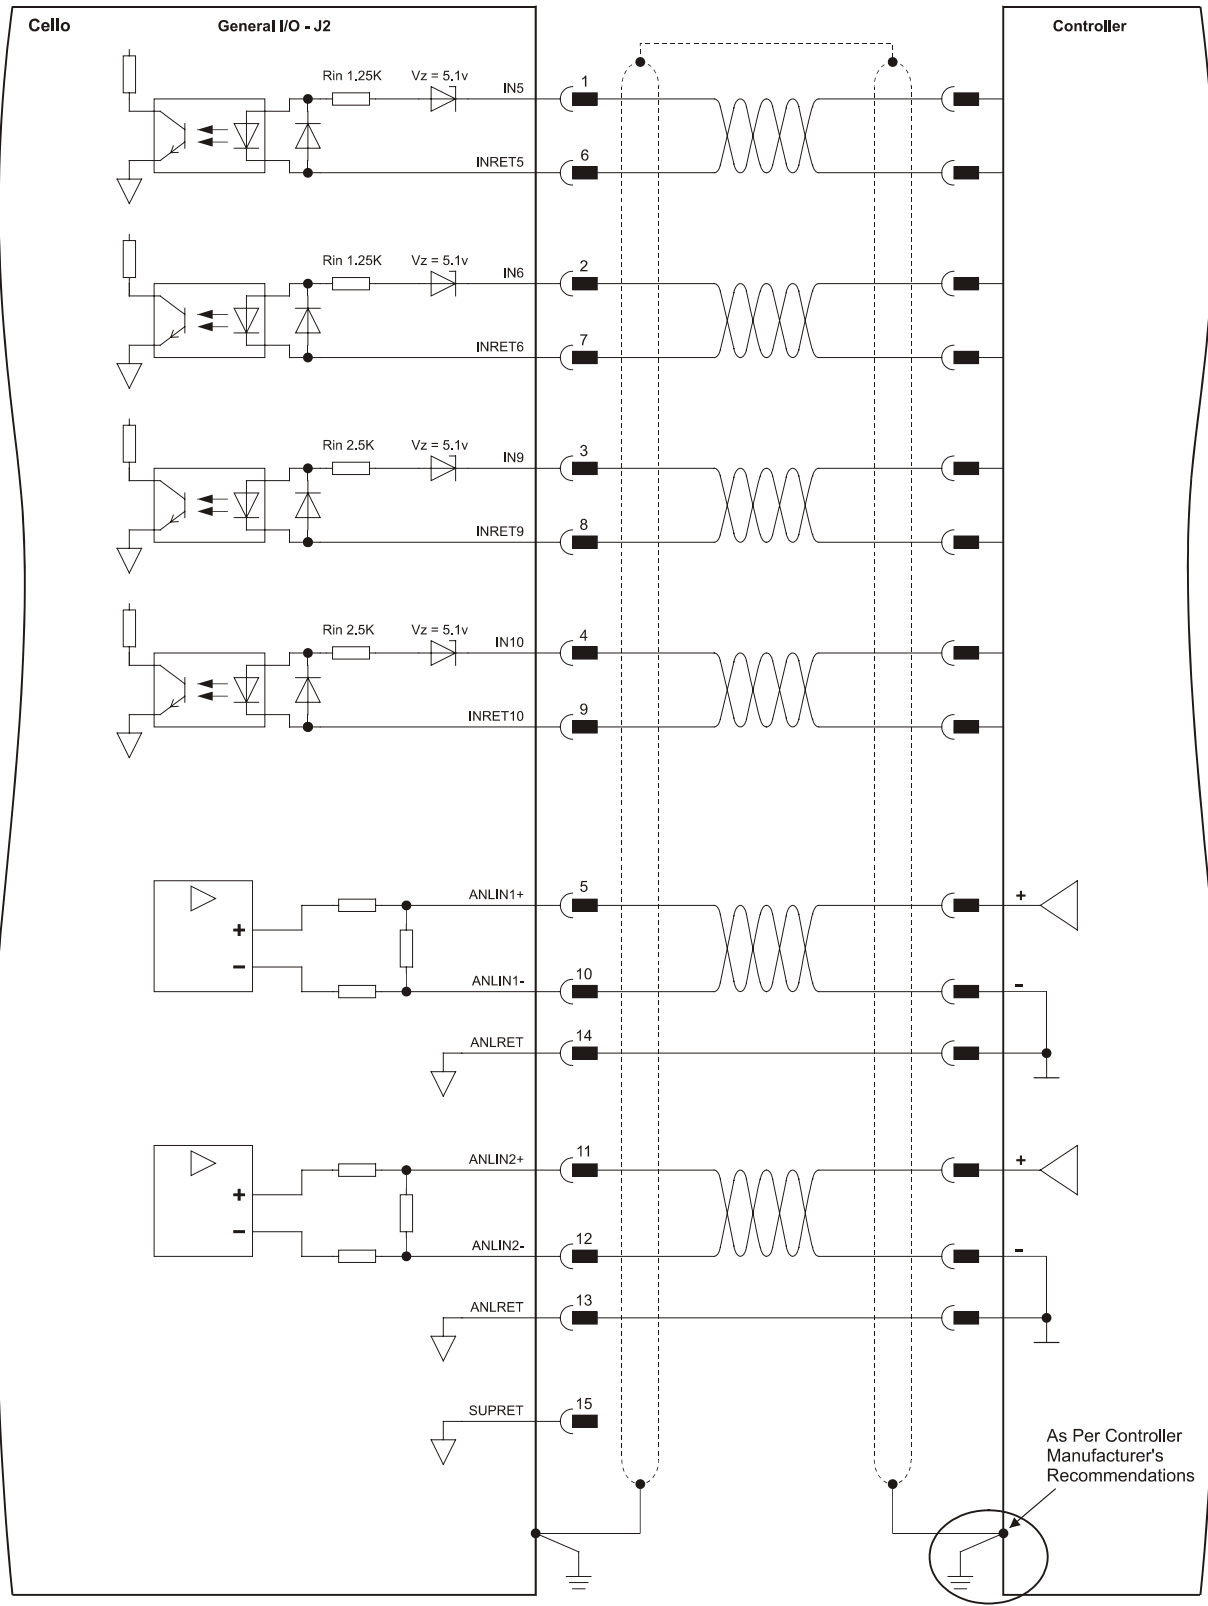

CEL0025A

Figure 3-15: General Input J2 Connection Diagram

3.4.9 Communication Cables

The communication cables use an 8-pin RJ-45 plug that connect to the RS-232 and CANopen ports on the “top” of the Cello.

The communication interface may differ according to the user’s hardware. The Cello can communicate using the following options:

- a. RS-232, full duplex
- b. CANopen

RS-232 communication requires a standard, commercial 3-core null-modem cable connected from the Cello to a serial interface on the PC. The interface is selected and set up in the Composer software.

In order to benefit from **CANopen** communication, the user must have an understanding of the basic programming and timing issues of a CANopen network. The interface is electrically isolated by optocouplers.

For ease of setup and diagnostics of CAN communication, RS-232 and CANopen can be used simultaneously.

3.4.9.1 RS-232 Communication



Notes for connecting the RS-232 communication cable:

- Use a 26 or 28 AWG twisted pair shielded cable. The shield should have aluminum foil covered by copper braid with a drain wire.
- Connect the shield to the ground of the host (PC). Usually, this connection is soldered internally inside the connector at the PC end. You can use the drain wire to facilitate connection.
- The male RJ plug must have a shield cover.
- Ensure that the shield of the cable is connected to the shield of the RJ plug. The drain wire can be used to facilitate the connection.

Pin	Signal	Function	Pin Location
1	—	—	
2	—	—	
3	Tx	RS-232 transmit	
4	—	—	
5	COMRET	Communication return	
6	Rx	RS-232 receive	
7	—	—	
8	—	—	

Table 3-13: RS-232 Cable - Pin Assignments

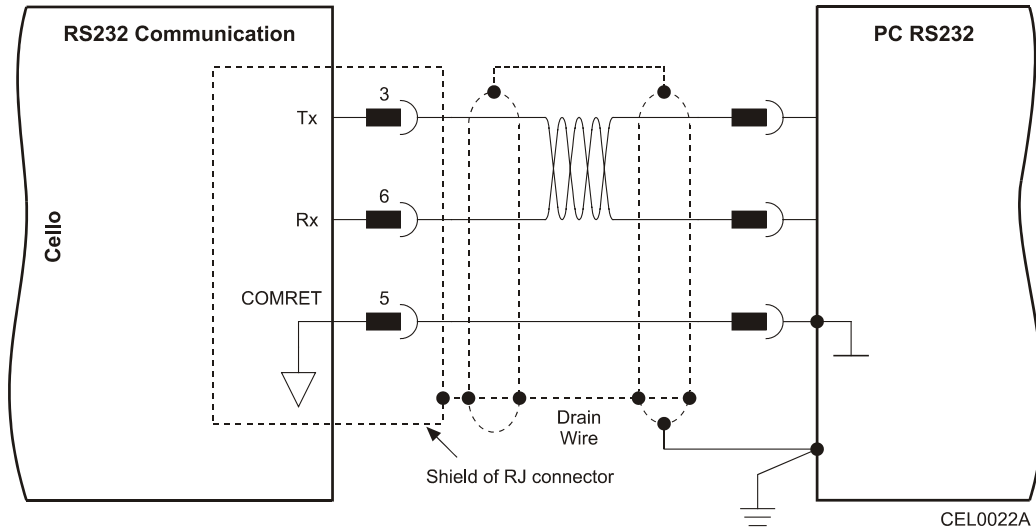


Figure 3-16: RS-232 Connection Diagram

3.4.9.2 CANopen Communication




Notes for connecting the CANopen communication cable:


- Use 26 or 28 AWG twisted pair shielded cables. For best results, the shield should have aluminum foil and covered by copper braid with a drain wire
- Connect the shield to the ground of the host (PC). Usually, this connection is soldered internally inside the connector at the PC end. You can use the drain wire to facilitate connection.
- The male RJ plug must have a shield cover.
- Ensure that the shield of the cable is connected to the shield of the RJ plug. The drain wire can be used to facilitate the connection.
- Connect a termination 120-ohm resistor at each of the two ends of the network cable.

Pin	Signal	Function	Pin Position
1	CAN_H	CAN_H busline (dominant high)	
2	CAN_L	CAN_L busline (dominant low)	
3	CAN_GND	CAN ground	
4	—	—	
5	—	—	
6	CAN_SHLD	Shield, connected to the RJ plug cover	
7	CAN_GND	CAN Ground	
8	—	—	

Table 3-14: CANopen Cable - Pin Assignments

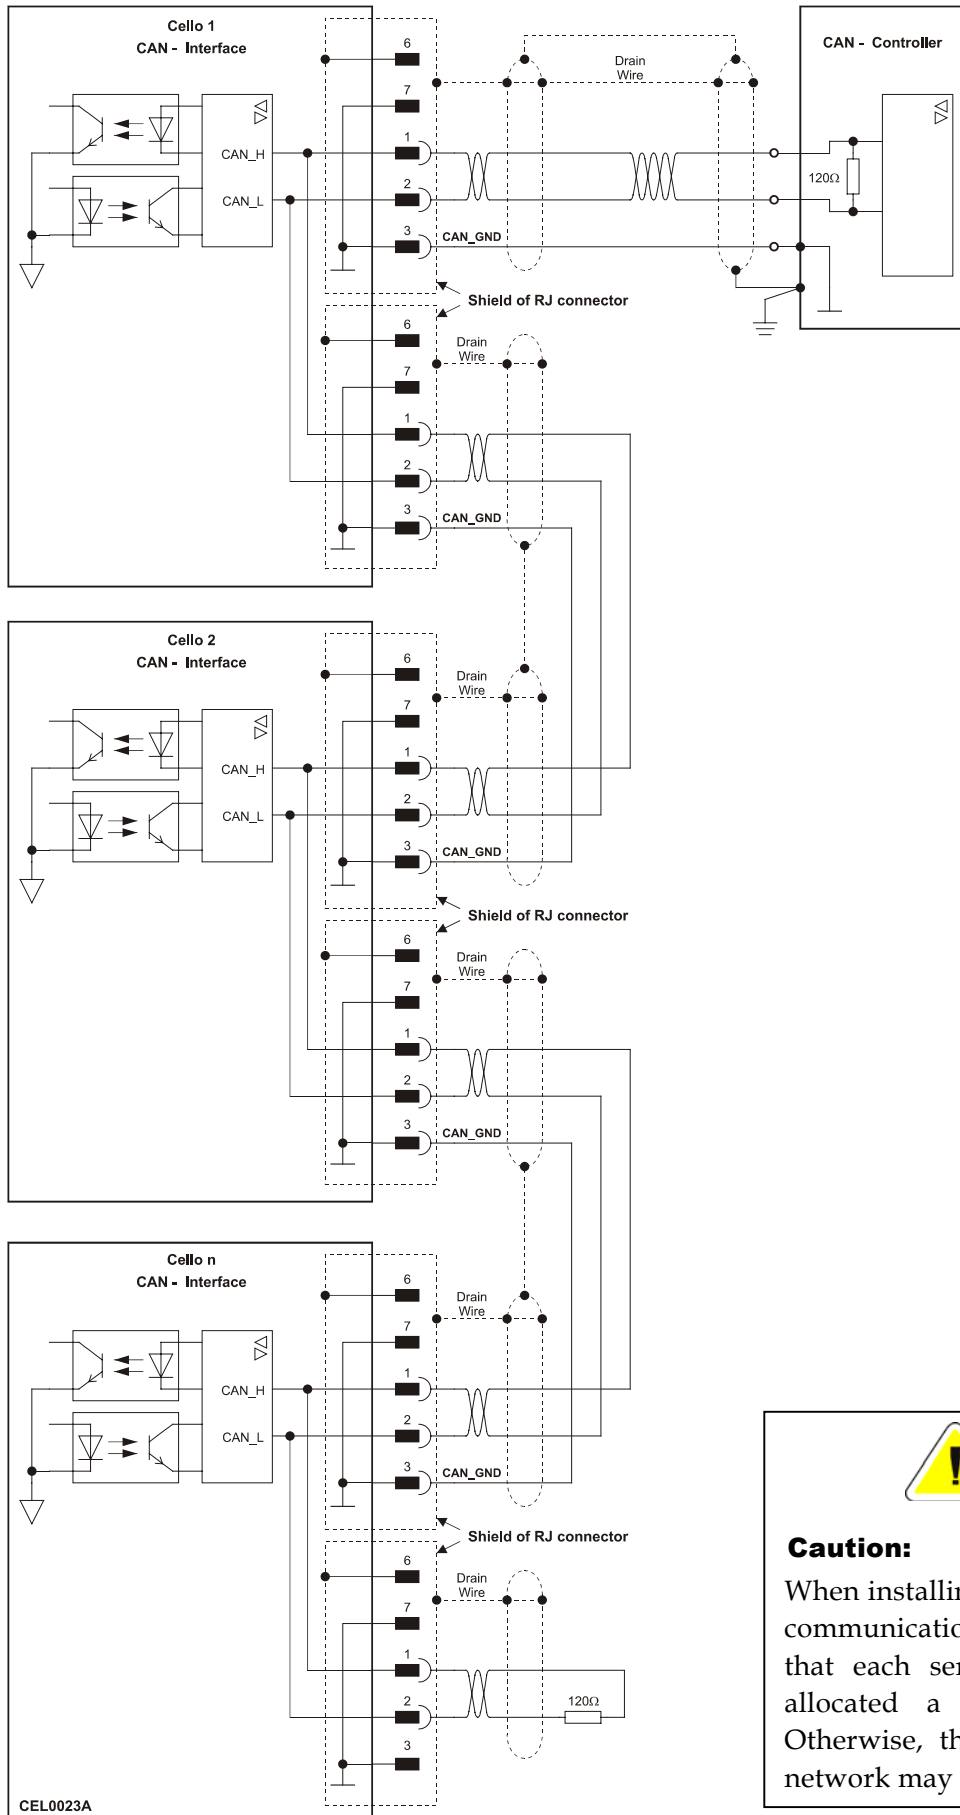

CEL0023A



Caution:
 When installing CANopen communications, ensure that each servo drive is allocated a unique ID. Otherwise, the CANopen network may hang.

Figure 3-17: CANopen Connection Diagram

3.5 Powering Up

After the Cello has been mounted, check that the cables are intact. The Cello servo drive is then ready to be powered up.

**Caution:**

Before applying power, ensure that the DC supply is within the range specified for your specific type of Cello and that the proper plus-minus connections are in order.

3.6 Initializing the System

After the Cello has been connected and mounted, the system must be set up and initialized. This is accomplished using the *Composer*, Elmo's Windows-based software application. Install the application and then perform setup and initialization according to the directions in the *Composer Software Manual*.

Appendix: Technical Specifications

A.1 Features

A.1.1 Motion Control Modes

- Current/Torque - up to 14 KHz sampling rate
- Velocity - up to 7 KHz sampling rate
- Position - up to 3.5 KHz sampling rate

A.1.2 Advanced Positioning Motion Control Modes

- PTP, PT, PVT, ECAM, Follower, Pulse and Direction, Dual Loop
- Fast event capturing inputs
- Fast output compare (OC)

A.1.3 Advanced Filters and Gain Scheduling

- "On-the-Fly" gain scheduling of current and velocity
- Velocity and position with "1-2-4" PIP controllers
- Automatic commutation alignment
- Automatic motor phase sequencing

A.1.4 Fully Programmable

- Third generation programming structure with motion commands
- Event capturing interrupts
- Event triggered programming

A.1.5 Feedback Options

- Incremental Encoder - up to 20 Mega-Counts (5 Mega-Pulse) per second
- Digital Halls - up to 2 KHz
- Incremental Encoder with Digital Halls for commutation - up to 20 Mega-Counts per second for encoder
- Absolute Encoder
- Interpolated Analog Sine/Cosine Encoder - up to 250 KHz (analog signal)
 - Internal Interpolation - up to x4096
 - Automatic Correction of amplitude mismatch, phase mismatch, signals offset
 - Encoder outputs, buffered, differential.
- Resolver
 - Programmable 10~15 bit resolution
 - Up to 512 Revolution Per Second (RPS)
 - Encoder outputs, buffered, differential
- Elmo drives provide supply voltage for all the feedback options


A.1.6 Input/Output

- Analog Inputs - up to 14-bit resolution
- Programmable digital inputs, optically isolated
 - Inhibit \ Enable motion
 - Software and analog reference stop
 - Motion limit switches
 - Begin on input
 - Abort motion
 - General-purpose
 - Homing
- Fast event capture inputs, optically isolated
- Programmable digital outputs
 - Brake Control
 - Amplifier fault indication
 - General-purpose
 - Servo enable indication
- Buffered and differential outputs of the main encoder with up to 5 MHz pulses
- Buffered and differential outputs of the auxiliary encoder
- Emulated output of the resolver or interpolated analog encoder
- Fast output compare (OC), optically isolated

A.1.7 Built-In Protection

- Software error handling
- Abort (hard stops and soft stops)
- Status reporting
- Protection against
 - Shorts between motor power outputs
 - Shorts between motor power output and power input return
 - Failure of internal power supplies
 - Overheating
 - Over/Under voltage
 - Loss of feedback
 - Following error
 - Current limits

A.2 Cello Dimensions

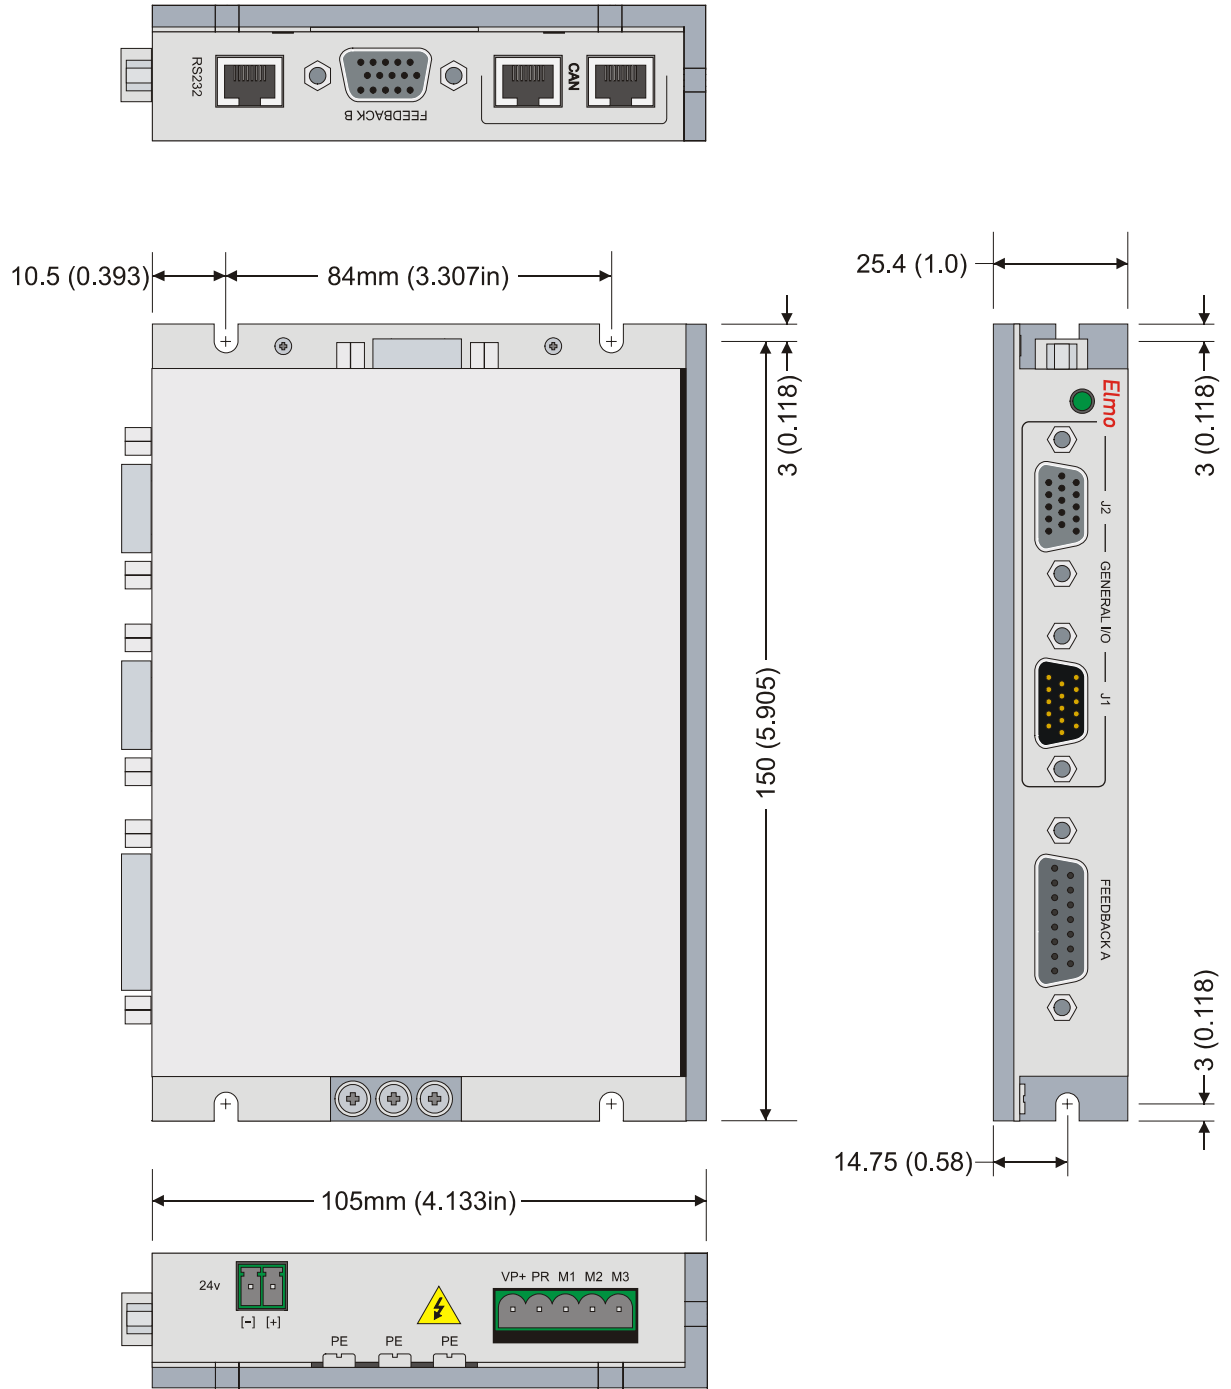

CEL0027A

A.3 Power Ratings

Feature	Unit	5/60				10/60				15/60				15RMS/60				3/100				10/100				15/100				15RMS/100				2/200				6/200				10/200				15/200				15RMS/200			
Minimum supply voltage	VDC	10																20																40																			
Nominal supply voltage	VDC	55																85																180																			
Maximum supply voltage	VDC	59																95																195																			
Maximum Output Power from the Drive	W	250	510	760	1070	270	820	1220	1730	380	990	1680	2510	3550																																							
Efficiency at rate power	%	> 97																> 97																> 97																			
DC (trapezoidal commutation) continuous RMS current limit (Ic)	A	5	10	15	15	3.3	10	15	15	2.25	6	10	15	15																																							
Sinusoidal commutation continuous RMS current limit (Ic)	A	3.5	7.1	10.6	15	2.33	7.1	10.6	15	1.6	4.2	7.1	10.6	15																																							
Peak current limit (RMS)	A	2 x Ic																2 x Ic																2 x Ic																			
Output power without additional heatsink	%	100																100																100																75	50		
PWM Switching Frequency	KHz	22 +/-5% default on the motor																																																			
Switching Method	Advanced Unipolar PWM																																																				
Weight	640 grams (22.6 ounces)																																																				
Dimensions	150 x 25.4 x 105 mm (5.9" x 1.0" x 4.1")																																																				
Mounting Method	Wall Mount (on back or on side)																																																				
Digital In / Digital Out / Analog In	10 / 5 / 2																																																				

A.4 Environmental Conditions

Feature	Details
Operating ambient temperature	0° ~ 40° C (32° ~ 104° F)
Storage temperature	-20° ~ +85° C (-4° ~ +185° F)
Humidity	90% maximum non-condensing
Protection level	IP20

A.5 Cello Connections

The following connectors are used for wiring the Cello.

Pins	Type	Maker & Part No.	Mating Connector	Port
5	5.00 mm Pitch Header and Plug	Phoenix Header MSTBA 2.5 HC/5-G	Phoenix Plug (supplied) MSTBT 2.5 HC/5-ST	VP+, PR M1, M2, M3
3	M4 screws			PE, PE, PE
2	3.81 mm Pitch Header and Plug	Phoenix Header MC 1.5/2-G-3.81	Phoenix Plug (supplied) MC 1.5/2-ST-3.81	24v

Connector Location

Table A-1: Connectors on the Bottom of the Cello

Pins	Type	Port	Connector Location
15	D-Sub Socket	FEEDBACK A	
15	High Density D-Sub Plug	J1	
15	High Density D-Sub Socket	J2	

Table A-2: Connectors on the Front of the Cello

Pins	Type	Port	Connector Location
8	RJ-45	CAN	
8	RJ-45	CAN	
15	High Density D-Sub Socket	FEEDBACK B	
8	RJ-45	RS-232	

Table A-3: Connectors on the Top of the Cello

A.5.1 Backup Supply (Optional)

Feature	Details
Auxiliary power supply	<i>DC source only</i>
Auxiliary supply input voltage	24 V \pm 20%
Auxiliary supply input power	10 W



The Cello can operate without a 24 Volt back-up power supply

A.6 Control Specifications

A.6.1 Current Loop

Feature	Details
Controller type	Vector, digital
Compensation for bus voltage variations	"on-the-fly" Gain scheduling
Motor types	<ul style="list-style-type: none"> ▪ AC brushless (sinusoidal) ▪ DC brushless (trapezoidal) ▪ DC brush ▪ Linear motors ▪ Moving coils
Current control	<ul style="list-style-type: none"> ▪ Fully digital ▪ Sinusoidal with vector control ▪ Programmable PI control filter based on a pair of PI controls of AC current signals and constant power at high speed
Current loop bandwidth	> 2.5 KHz
Current sampling time	Programmable 70 - 100 μ sec
Current sampling rate	up to 16 KHz

A.6.2 Velocity Loop

Feature	Details
Controller type	PI
Velocity control	<ul style="list-style-type: none"> ▪ Fully digital ▪ Programmable PI and FFW control filters ▪ On-the-fly gain scheduling ▪ Automatic, manual and advanced manual tuning
Velocity and position feedback options	<ul style="list-style-type: none"> ▪ Incremental Encoder ▪ Digital Halls ▪ Interpolated Analog (sin/cos) Encoder (optional) ▪ Resolver (optional) <p>Note: With all feedback options, 1/T with automatic mode switching is activated (gap, frequency and derivative).</p>
Velocity sampling time	140 - 200 μ sec (x2 current loop sample time)
Velocity sampling Rate	up to 8 KHz
Velocity command options	<ul style="list-style-type: none"> ▪ Analog ▪ Internally calculated by either jogging or step <p>Note: All software-calculated profiles support on-the-fly changes.</p>

A.6.3 Position Loop

Feature	Details
Controller type	"1-2-4" PIP
Position command options	<ul style="list-style-type: none"> ▪ Software ▪ Pulse and Direction
Position sampling time	280 - 400 μ sec (x 4 current loop sample time)
Position sampling rate	up to 4 KHz

A.7 Feedbacks

A.7.1 Feedback Supply Voltage

Feature	Details
Main encoder supply voltage	5 V \pm 5% @ 200 mA maximum
Auxiliary encoder supply voltage	5 V \pm 5% @ 200 mA maximum

A.7.2 Incremental Encoder Input

Feature	Details
Encoder format	<ul style="list-style-type: none"> ▪ A, B and Index ▪ Differential ▪ Quadrature
Interface:	RS-422
Input resistance:	Differential: 120 Ω
Maximum incremental encoder frequency:	Maximum: 5 MHz pulses
Minimum quadrature input period (P_{IN})	112 nsec
Minimum quadrature input high/low period (P_{HL})	56 nsec
Minimum quadrature phase period (P_{PH})	28 ns
Maximum encoder input voltage range	Common mode: \pm 7V Differential mode: \pm 7V

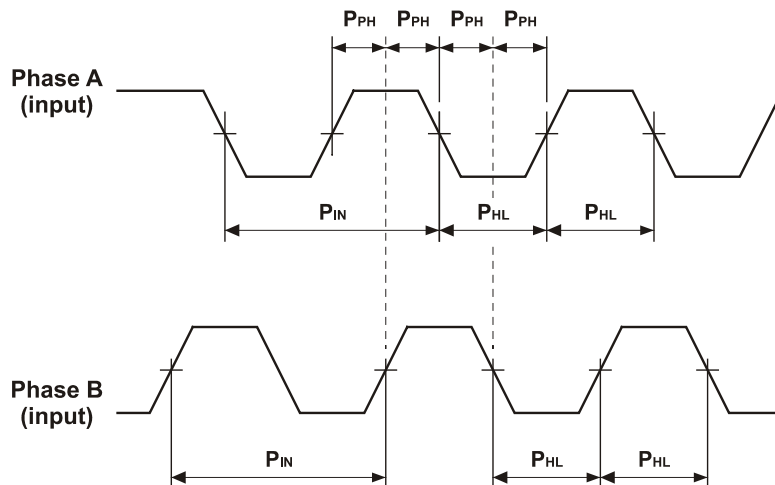


Figure A-A-1: Encoder Phase Diagram

A.7.3 Digital Halls

Feature	Details
Halls inputs	<ul style="list-style-type: none"> ▪ H_A, H_B, H_C. ▪ Single ended inputs ▪ Built in hysteresis for noise immunity.
Input voltage	Nominal operating range: $0V < V_{In_Hall} < 5V$ Maximum absolute: $-1V < V_{In_Hall} < 15V$ High level input voltage: $V_{InHigh} > 2.5V$ Low level input voltage: $V_{InLow} < 1V$
Input current	Sink current (when input pulled to the common): 3ma Source current: 1.5 ma (designed to also support open collector Halls)
Maximum frequency	$f_{MAX} : 2 \text{ KHz}$

A.7.4 Interpolated Analog Encoder (Sine/Cosine)

Feature	Details
Analog encoder format	Sine and Cosine signals
Analog input signal level	<ul style="list-style-type: none"> ▪ Offset voltage: 2.2 V - 2.8 V ▪ Differential, 1 V peak to peak
Input resistance	Differential 120 Ω
Maximum analog signal frequency	$f_{MAX} : 250 \text{ kHz}$
Interpolation multipliers	Programmable: x4 to x4096
Maximum "counts" frequency	20 mega-counts/sec
Automatic errors correction	Signal amplitudes mismatch Signal phase shift Signal offsets

A.7.5 Resolver

Feature	Details
Resolver format	<ul style="list-style-type: none"> ▪ Sine/Cosine ▪ Differential
Input resistance	Differential 2.49 K Ω
Resolution	Programmable: 10 ~ 15 bits
Maximum electrical frequency (RPS)	512 revolutions/sec
Resolver transfer ratio	0.5
Reference frequency	1/Ts (Ts = sample time in seconds)
Reference voltage	Supplied by the Cello
Reference current	up to ± 50 mA

A.7.6 Encoder Outputs

Feature	Details
Encoder output format	<ul style="list-style-type: none"> ▪ A, B, Index ▪ Differential outputs ▪ Quadrature
Interface	RS-422
Port B1 output current capability	<ul style="list-style-type: none"> ▪ Driving differential loads of 200 Ω on INDEX/INDEX-, CHB/CHB- and CHA/CHA- pairs
Port B2 output current capability	<ul style="list-style-type: none"> ▪ INDEXO/INDEXO-, CHBO/CHBO- and CHAO/CHAO- pairs are not loaded
Available as options	<ul style="list-style-type: none"> ▪ Two simultaneous buffered outputs of main-incremental encoder input ▪ Two simultaneous emulated encoder outputs of analog encoder input ▪ Two simultaneous emulated encoder outputs of resolver input ▪ Buffered output of auxiliary input
Maximum frequency	f_{MAX} : 5 MHz pulses/output
Edge separation between A & B	Programmable number of clocks to allow adequate noise filtering at remote receiver of emulated encoder signals
Index (marker)	Length of pulse is one quadrature (one quarter of an encoder cycle) and synchronized to A&B



A.8 I/O's

The Cello has: 10 Digital Inputs 5 Digital Outputs 2 Analog Inputs

A.8.1 Digital Input Interfaces

Feature	Details	Connector Location
Type of input	<ul style="list-style-type: none"> Optically isolated Single ended PLC level 	
Input current	$I_{in} = \frac{V_{in} - 6.5V}{2500\Omega}$ <p>* $I_{in} = 2.2 \text{ mA @ } V_{in} = 12 \text{ V}$</p>	
Input current for high speed inputs	$I_{in} = \frac{V_{in} - 6.5V}{1250\Omega}$ <p>* $I_{in} = 4.4 \text{ mA @ } V_{in} = 12 \text{ V}$</p>	
High-level input voltage	$12 \text{ V} < V_{in} < 30 \text{ V}$, 24 V typical	
Low-level input voltage	$0\text{V} < V_{in} < 6.5 \text{ V}$	
Minimum pulse width	$> 4 \times \text{TS}$, where TS is sampling time	
Execution time (all inputs): the time from application of voltage on input until execution is complete	<p>If input is set to one of the built-in functions – Home, Inhibit, Hard Stop, Soft Stop, Hard and Soft Stop, Forward Limit, Reverse Limit or Begin – execution is immediate upon detection: $0 < T < 4 \times \text{TS}$</p> <p>If input is set to General input, execution depends on program. Typical execution time: $\cong 0.5 \text{ msec}$.</p>	
High-speed inputs - minimum pulse width, in high-speed mode	<p>$T < 5 \mu\text{sec}$</p> <p>Notes:</p> <ul style="list-style-type: none"> Home mode is high-speed mode and can be used for fast capture and precise homing. High speed input has a digital filter set to same value as digital filter (EF) of main encoder. Highest speed is achieved when turning on optocouplers. 	<p style="text-align: right;"><i>Digital Input Schematic</i></p>


A.8.2 Digital Output Interface

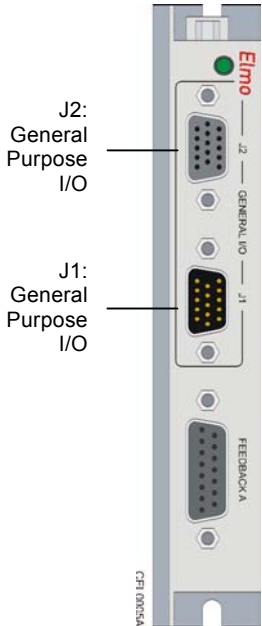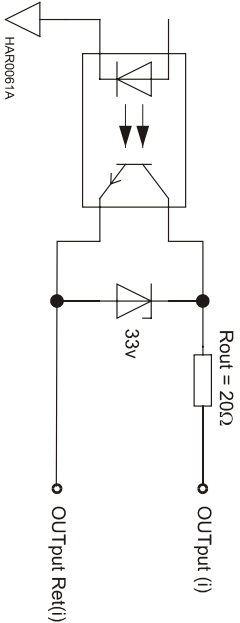Feature	Details	Connector Location
Type of output	<ul style="list-style-type: none"> Optically isolated Open collector and open emitter 	
Maximum supply output (Vcc)	30 V	
Max. output current Iout (max) (Vout = Low)	$I_{out} (max) \leq 15 \text{ mA}$	
VOL at maximum output voltage (low level)	$V_{out} (on) \leq 0.3 \text{ V} + 0.02 * I_{out} (mA)$	
RL	<p>External resistor RL must be selected to limit output current to no more than 15 mA.</p> $R_L = \frac{V_{cc} - VOL}{I_o(max)}$	
Executable time	<p>If output is set to one of the built-in functions – Home flag, Brake or AOK – execution is immediate upon detection: $0 < T < 4 \times TS$</p> <p>If output is set to General output and is executed from a program, the typical time is approximately 0.5 msec.</p>	 <p>Digital Output Schematic</p>

A.8.3 Analog Input

Feature	Details
Maximum operating differential voltage	$\pm 10 \text{ V}$
Maximum absolute differential input voltage	$\pm 16 \text{ V}$
Differential input resistance	3 K Ω
Analog input command resolution	14-bit

A.9 Communications

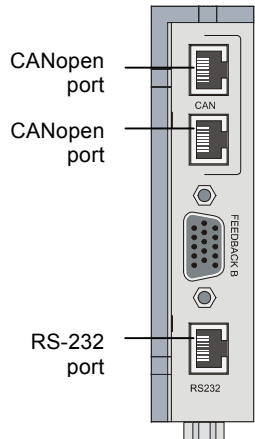Specification	Details	Connector Location
RS-232	Signals: <ul style="list-style-type: none"> RxD , TxD , Gnd Full duplex, serial communication for setup and control. Baud Rate of 9,600 ~ 115,200 bit/sec. 	 <p>The diagram shows a vertical panel with several connectors. From top to bottom: two RJ45 ports labeled 'CANopen port', a circular 'FEEDBACK B' port, and an RJ45 port labeled 'RS-232 port'. A 'CAN' label is positioned between the two CANopen ports.</p>
CANopen	CANbus Signals: <ul style="list-style-type: none"> CAN_H, CAN_L, CAN_GND Maximum Baud Rate of 1 Mbit/sec. Version: <ul style="list-style-type: none"> DS 301 V4.01 Device Profile (drive and motion control): <ul style="list-style-type: none"> DSP 402 	

A.10 Pulse Width Modulation (PWM)

Feature	Details
PWM resolution	12-bit
PWM switching frequency on the load	2/Ts (factory default 22 kHz on the motor)

A.11 Mechanical Specifications

Feature	Details
Mounting method	Wall Mount
Overall dimensions	150 x 105 x 25.4 mm (5.9 x 4.13 x 1 in)
Weight	640 gm (22.6 oz)

A.12 Standards Compliance

A.12.1 Quality Assurance

Specification	Details
ISO 9001:2000	Quality Management

A.12.2 Design

Specification	Details
MIL-HDBK- 217F	Reliability prediction of electronic equipment (rating, de-rating, stress, etc.)
<ul style="list-style-type: none"> ▪ IPC-D-275 ▪ IPC-SM-782 ▪ IPC-CM-770 ▪ UL508c ▪ UL840 	Printed wiring for electronic equipment (clearance, creepage, spacing, conductors sizing, etc.)
In compliance with IEC68	Type testing

A.12.3 Safety

Specification	Details
In compliance with UL508c	Power conversion equipment
In compliance with UL840	Insulation coordination, including clearance and creepage distances of electrical equipment
In compliance with UL60950	Safety of information technology equipment, including electrical business equipment
In compliance with EN60204-1	Low voltage directive, 73/23/EEC

A.12.4 EMC

Specification	Details
<p>In compliance with</p> <p>EN55011 Class A with EN61000-6-2: Immunity for industrial environment, according to:</p> <p>IEC61000-4-2 / criteria B IEC61000-4-3 / criteria A IEC61000-4-4 / criteria B IEC61000-4-5 / criteria B IEC61000-4-6 / criteria A IEC61000-4-8 / criteria A IEC61000-4-11 / criteria B/C</p>	Electromagnetic compatibility (EMC)

A.12.5 Workmanship

Specification	Details
In compliance with IPC-A-610 , level 2	Acceptability of electronic assemblies

A.12.6 PCB

Specification	Details
In compliance with IPC-A-600 , level 2	Acceptability of printed circuit boards

A.12.7 Packing

Specification	Details
In compliance with EN100015	Protection of electrostatic sensitive devices

Index

A

- Advanced position control · 2-2
- Ambient operating temperature · 3-1
- Analog input
 - Specifications · A-12
- Auxiliary
 - Feedback cable · 3-14, 3-15
 - Power cable · 3-10
 - Power supply · A-6

C

- Cables
 - Auxiliary feedback · 3-14, 3-15
 - Auxiliary power · 3-10
 - Communication · 3-27
 - I/O · 3-23
 - Main Power · 3-9
 - Motor · 3-8
- CANopen · 3-27, 3-28
- Cello
 - Cables · 3-11
 - Connection diagram · 3-7
 - Connectors · 3-6
 - Dimensions · A-3
 - Initializing · 3-30
 - Installation · 3-1
 - Powering up · 3-30
 - Technical specifications · A-1
 - Type designation number · 3-3
 - Unpacking · 3-3
 - Wiring · 3-4
- Communication · 2-2
- Communication cables · 3-27
- Compliance standards · 1-3, A-14
- Composer · 2-1, 3-30
- Conformance · 1-3, A-14
- Connecting
 - Auxiliary power cable · 3-10
 - Control cables · 3-11
 - Feedback cables · 3-11
 - Main power cable · 3-9

Motor cables · 3-8

Power cables · 3-8

Connection diagram · 3-7

Control specifications · A-6, A-7

Current control · 2-1

D

- DC power supply · 3-9
- Differential auxiliary input · 3-17, 3-19, 3-21
- Digital output interface · A-12
- Dimensions · A-3

E

- Environmental conditions · A-4

F

- Fault protection · 2-3
- Feedback
 - Connector · 3-11
 - Options · 2-2, A-7
 - Supply voltage · A-8
- Feedback options · A-8, A-9, A-10, A-11

G

- Grounding · 1-1
 - Auxiliary power cable · 3-10
 - CANopen cables · 3-28
 - Main feedback cables · 3-11
 - Main power cables · 3-9
 - Motor cables · 3-8
 - RS-232 cable · 3-27

H

- Hardware requirements · 3-1

I

I/O cables · 3-23
Initializing the Cello · 3-30

M

Main feedback cable · 3-11
Main power cable · 3-9
Maximum
 Operating altitude · 3-1
 Relative humidity · 3-1
Mechanical specifications · A-13
Motor cables · 3-8
Mounting the Cello · 3-4

P

Position control · 2-2
Power
 Source · 1-2
Power cables · 3-8
Powering up the Cello · 3-30

R

Relative humidity · 3-1
RS-232 · 3-27

S

Safety · 1-1
 Cautions · 1-2
 Compliance standards · A-14

Standards · 1-3

Warnings · 1-2

Site requirements · 3-1

Specifications

 Analog input · A-12

 Auxiliary power supply · A-6

 Control · A-6, A-7

 Digital output interface · A-12

 Environment · A-4

 Feedback options · A-7, A-8, A-9, A-10, A-11

 Feedback supply voltage · A-8

 Mechanical · A-13

Standards · 1-3

System architecture · 2-3

T

Technical specifications · A-1

Temperature · 3-1

Type designation number · 3-3

U

Unpacking · 3-3

V

Velocity control · 2-1

W

Warranty · 1-3

Wiring the Cello · 3-4